 




Disney

10774

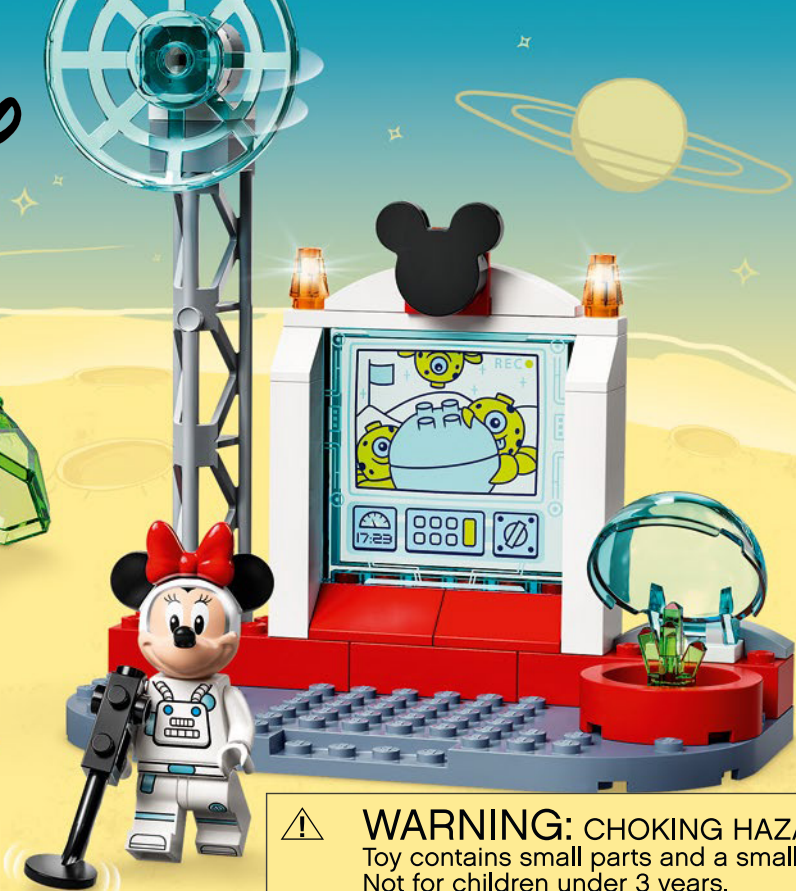

WARNING: CHOKING HAZARD.
Toy contains small parts and a small ball.
Not for children under 3 years.




**AVERTISSEMENT :**

    
 
 
RISQUE D'ÉTOUFFEMENT. Le jouet contient des petites pièces ainsi qu'une petite boule. Il ne convient pas aux enfants de moins de 3 ans.

 
**ADVERTENCIA:**

PELIGRO DE ASFIXIA.

 
 
Juguete que contiene partes pequeñas y una pelota pequeña. No recomendado para niños menores de 3 años.

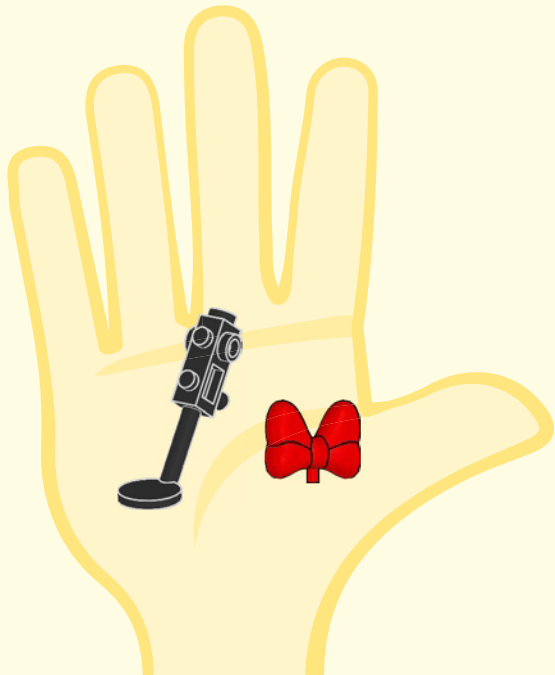 
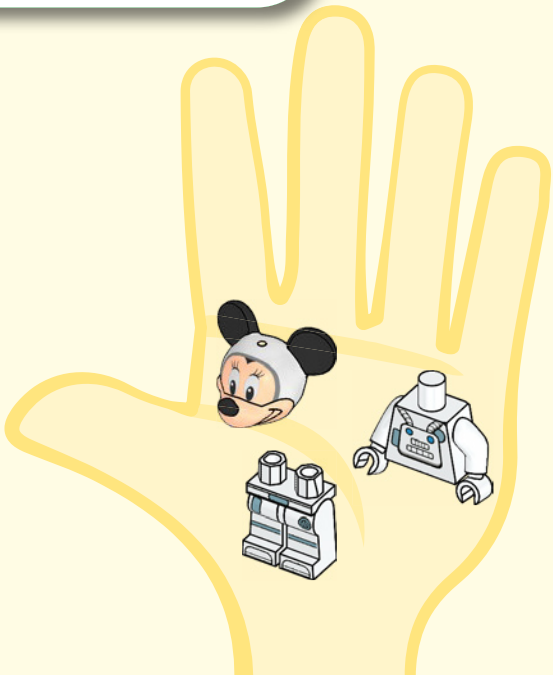 
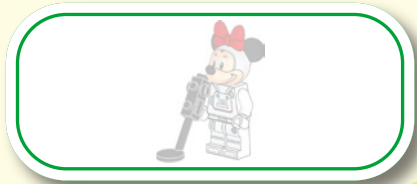 


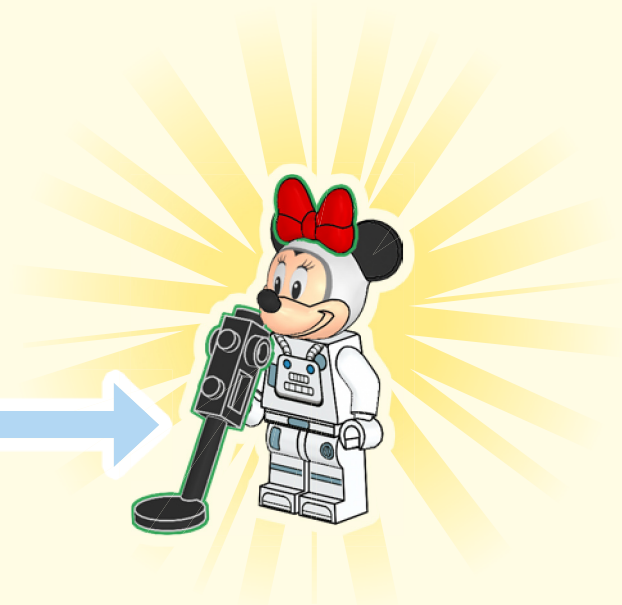 
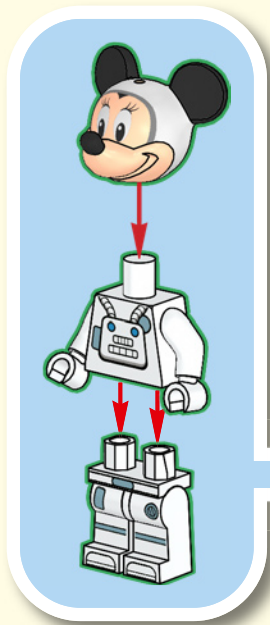 


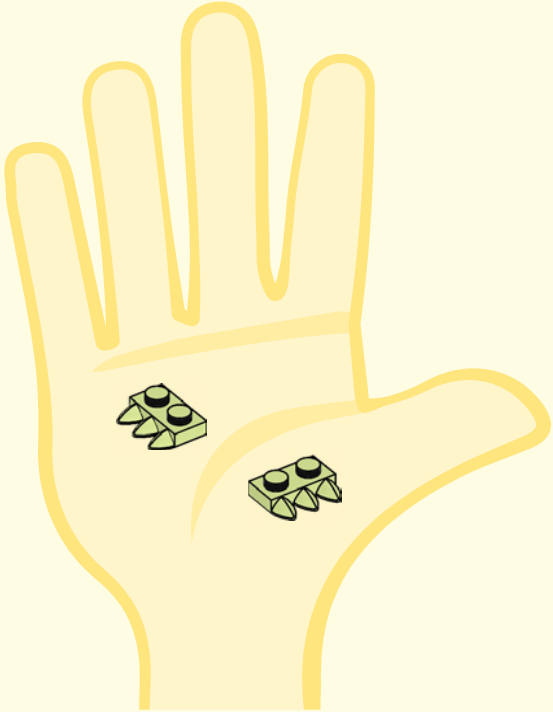 


 
 


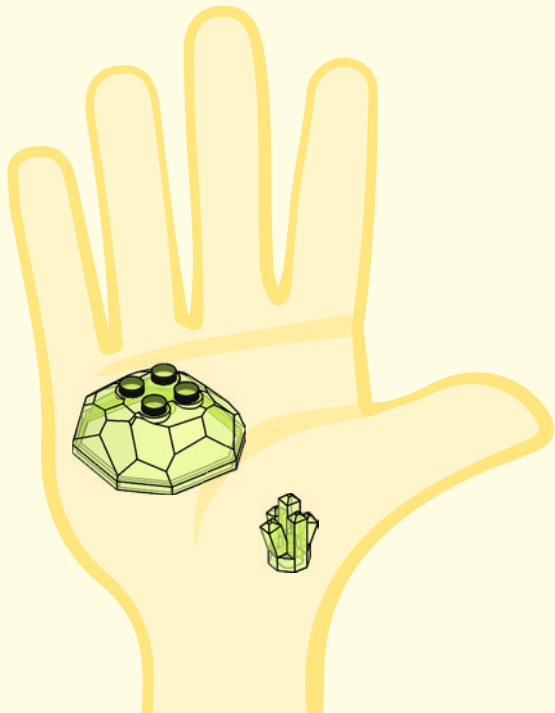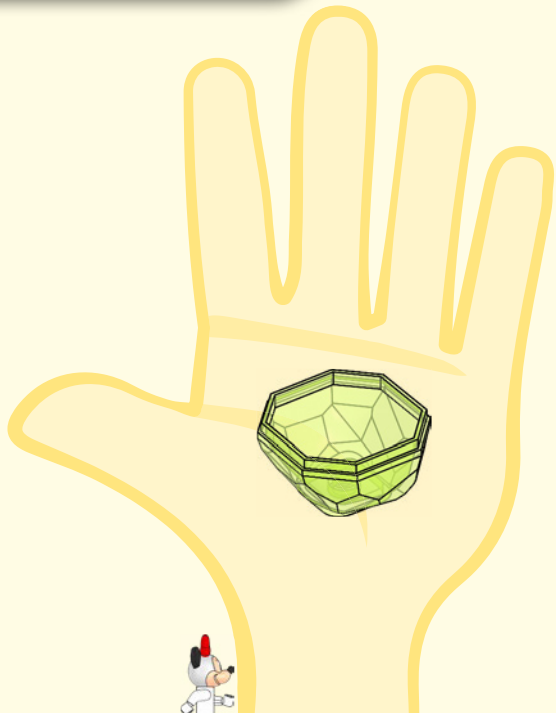 


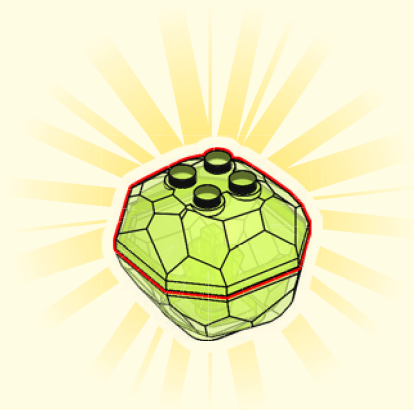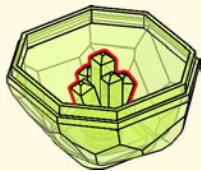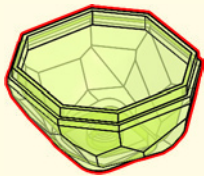 


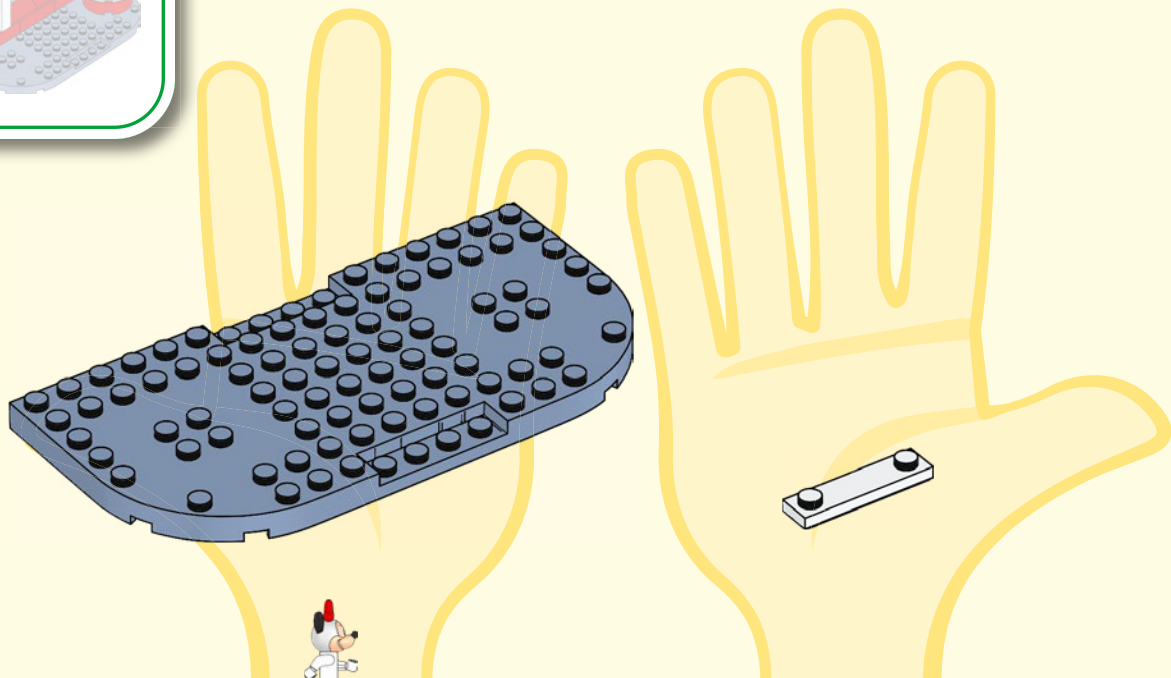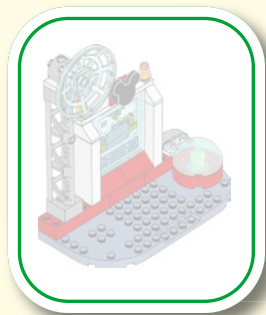 


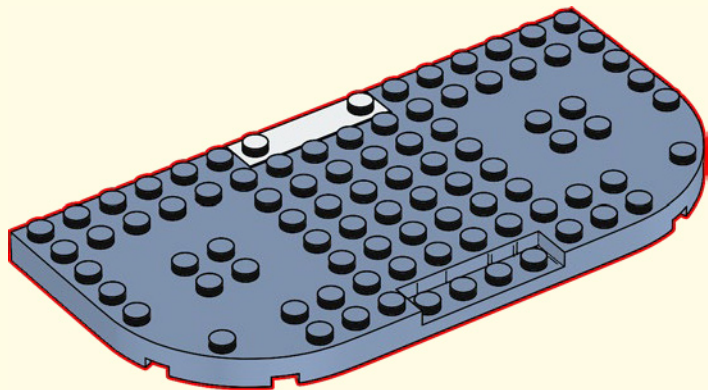 


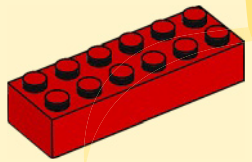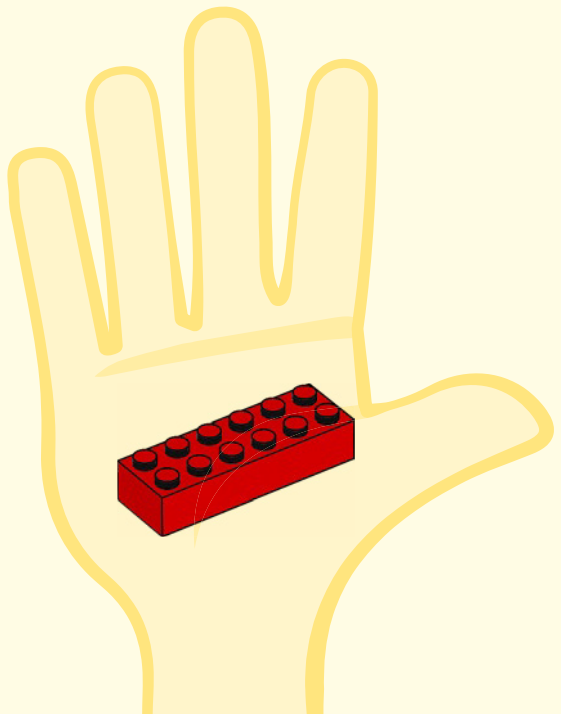 


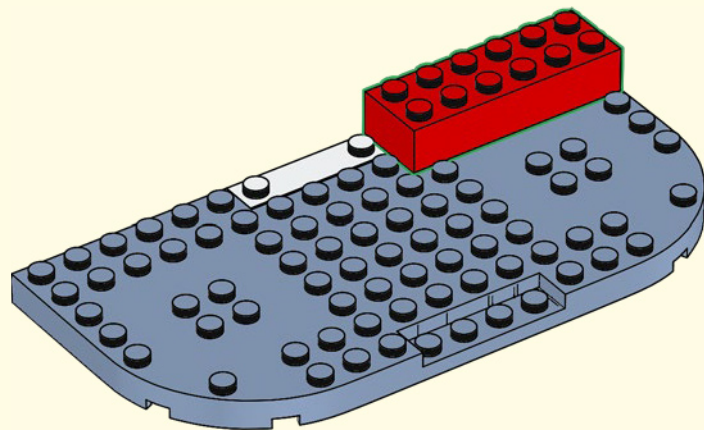 


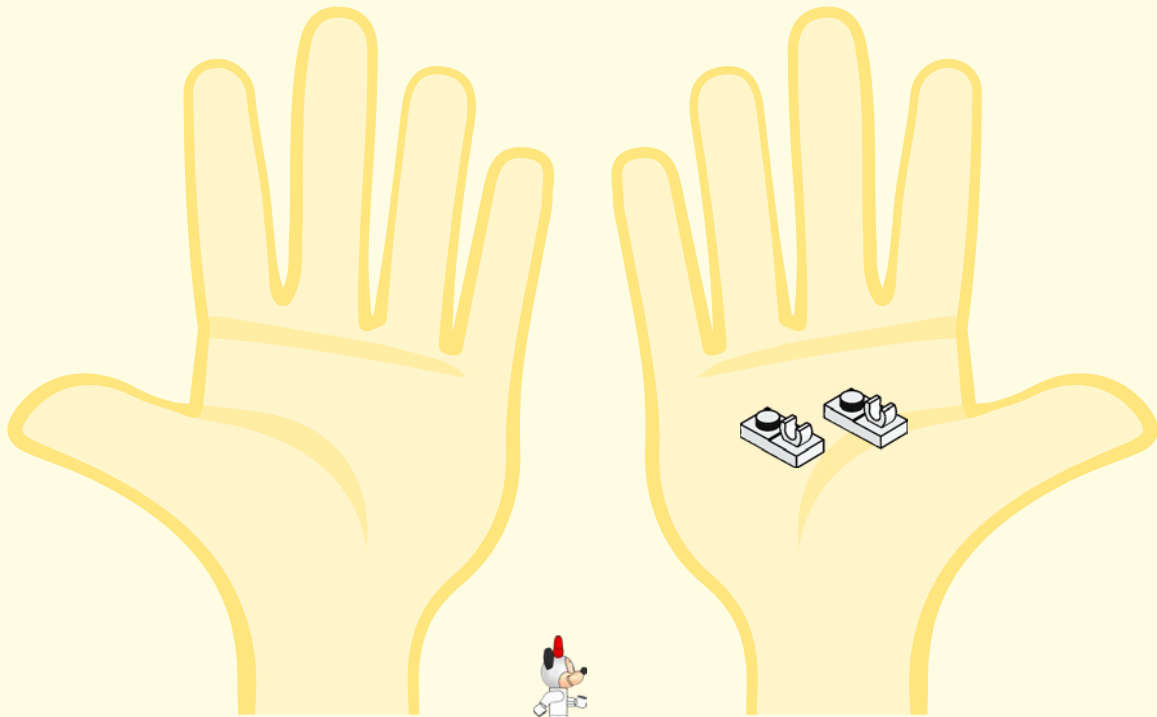 


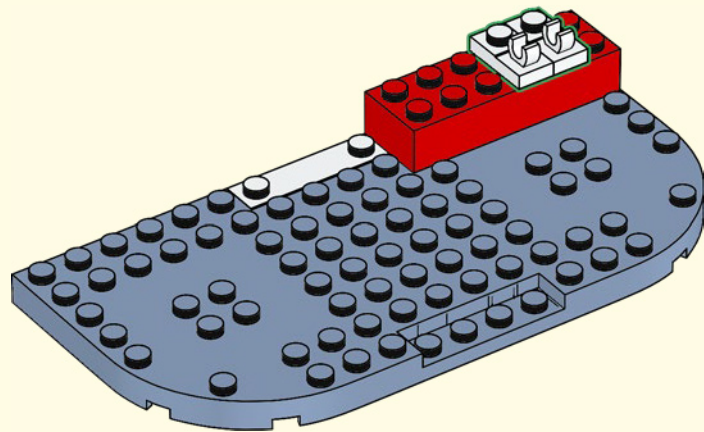 


 
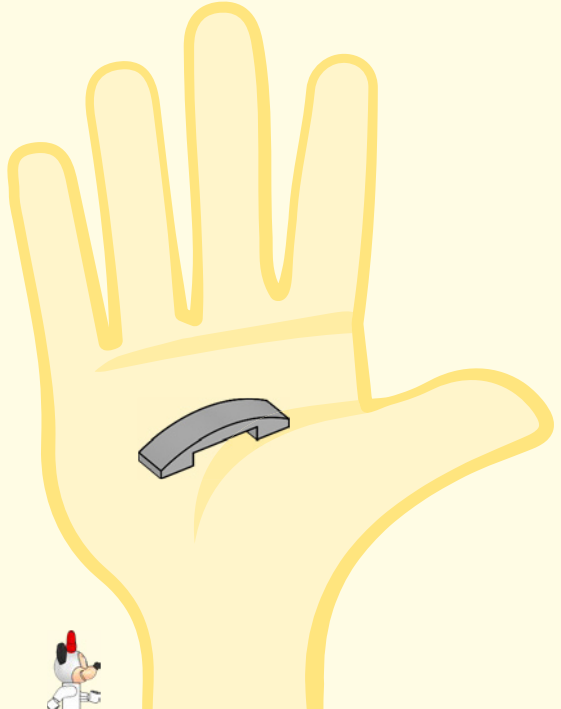 


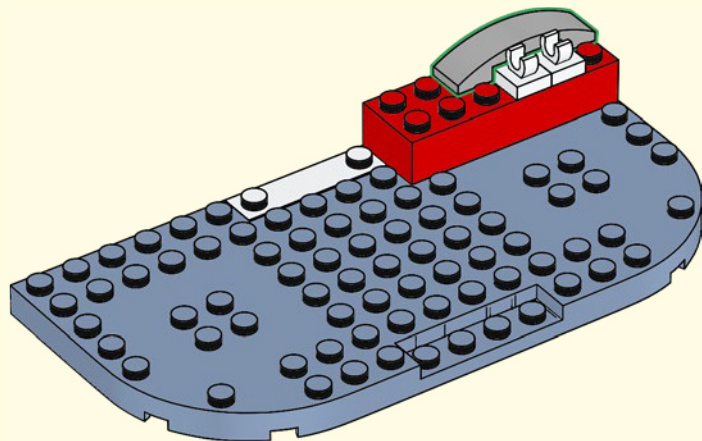

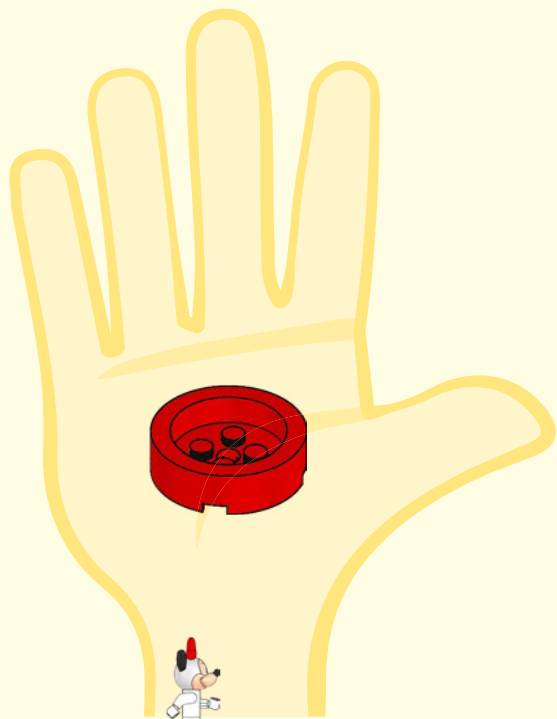 


 
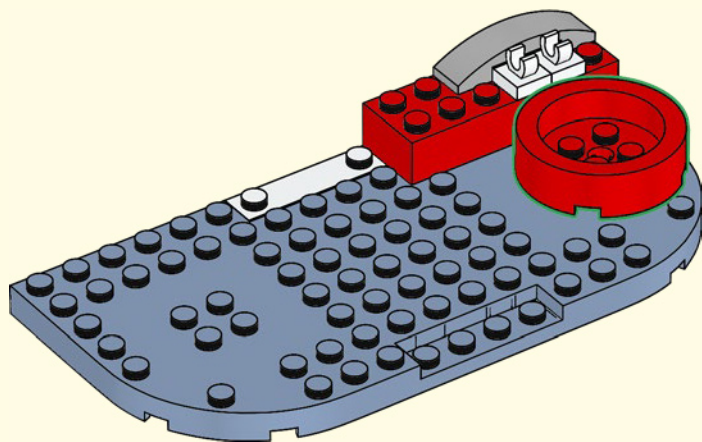 


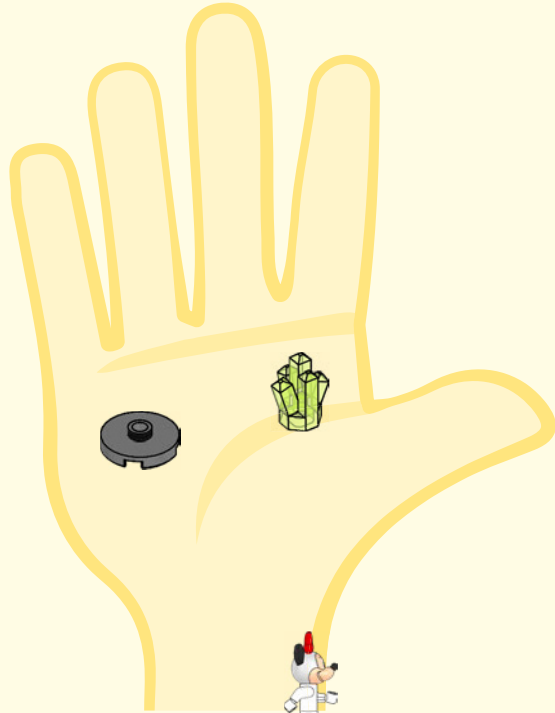 


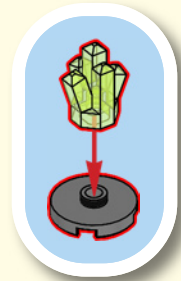 
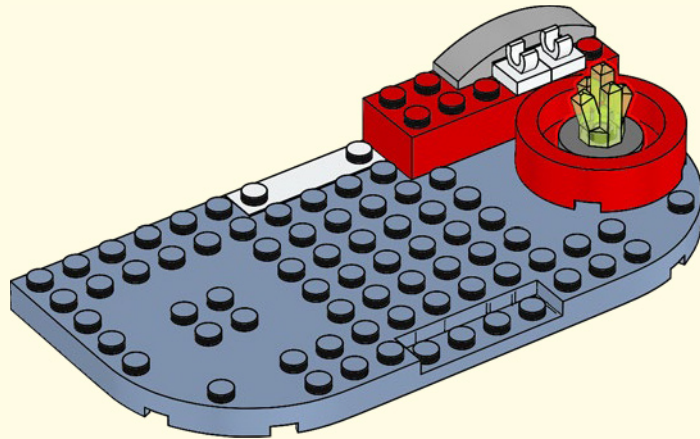 


 


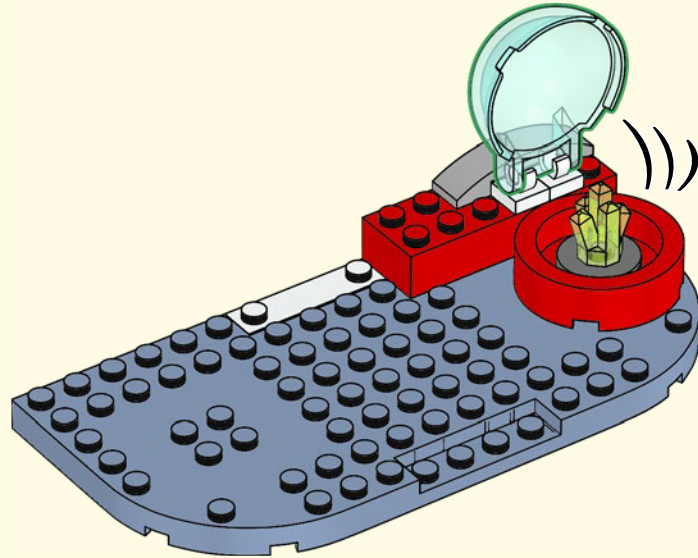 


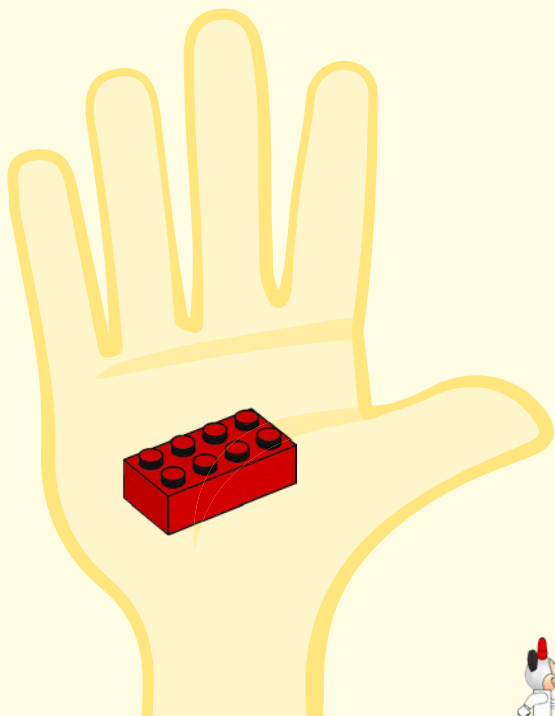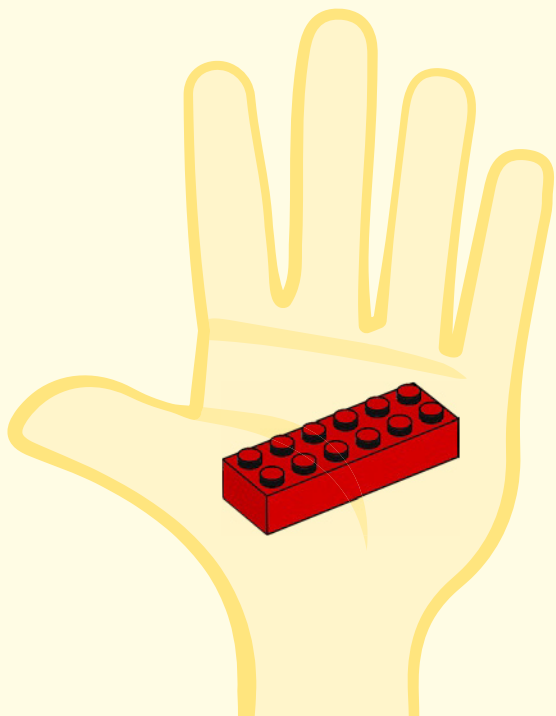 


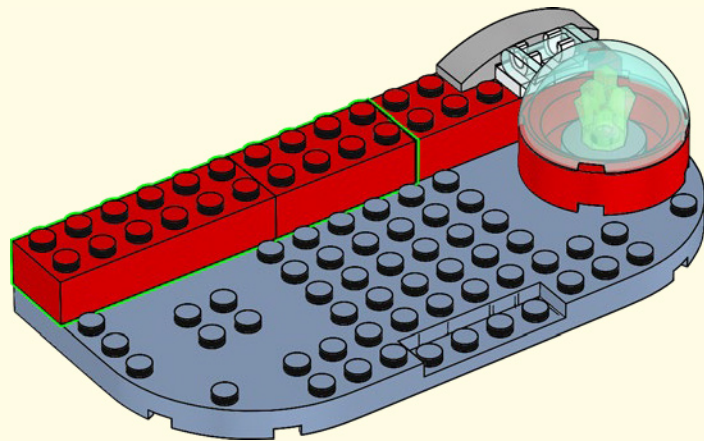 


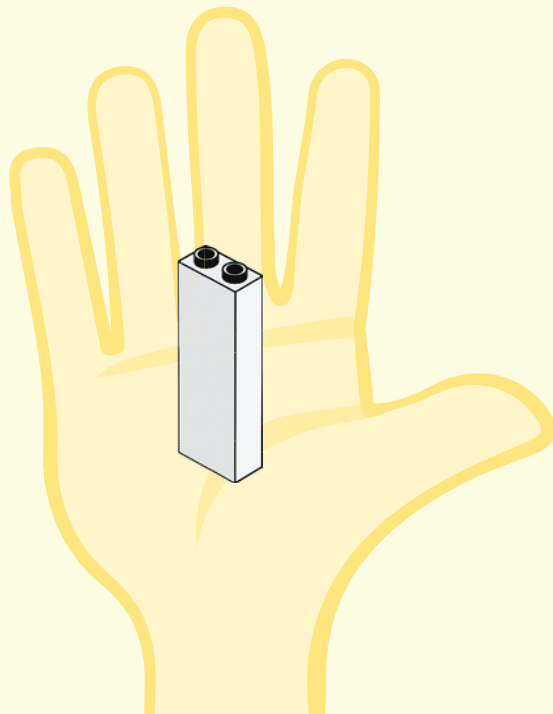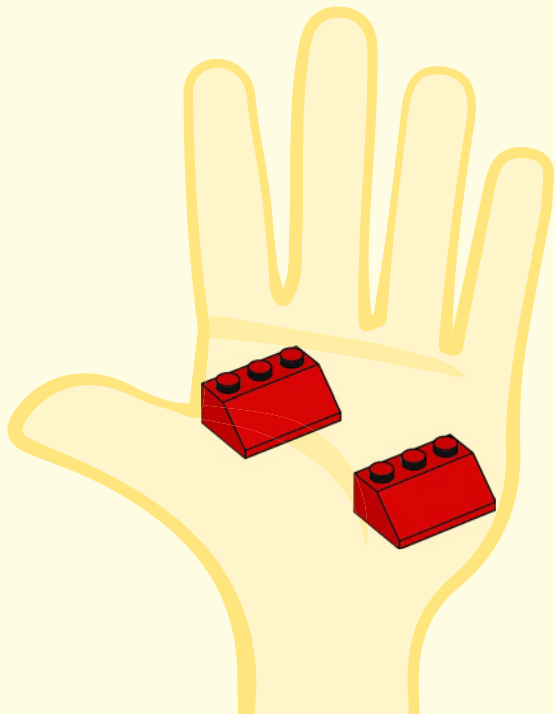 


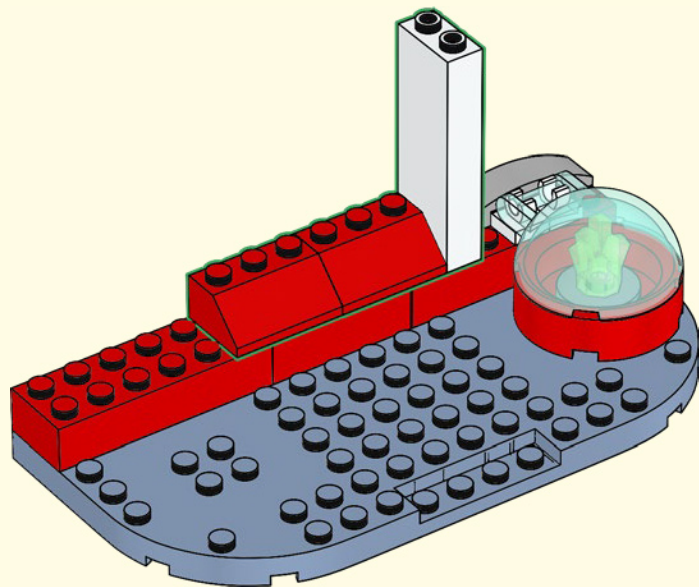 


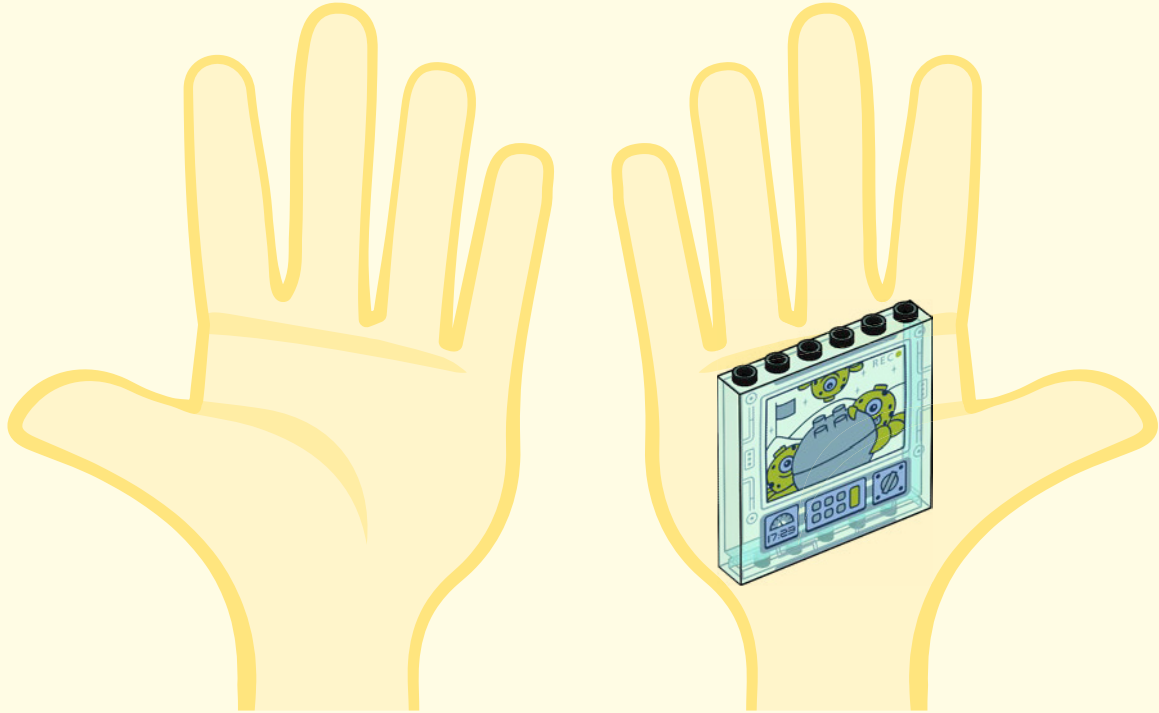 


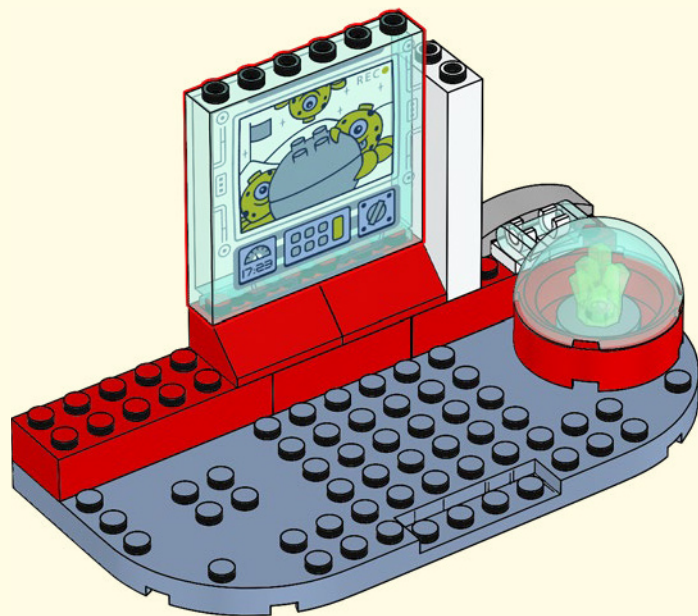 


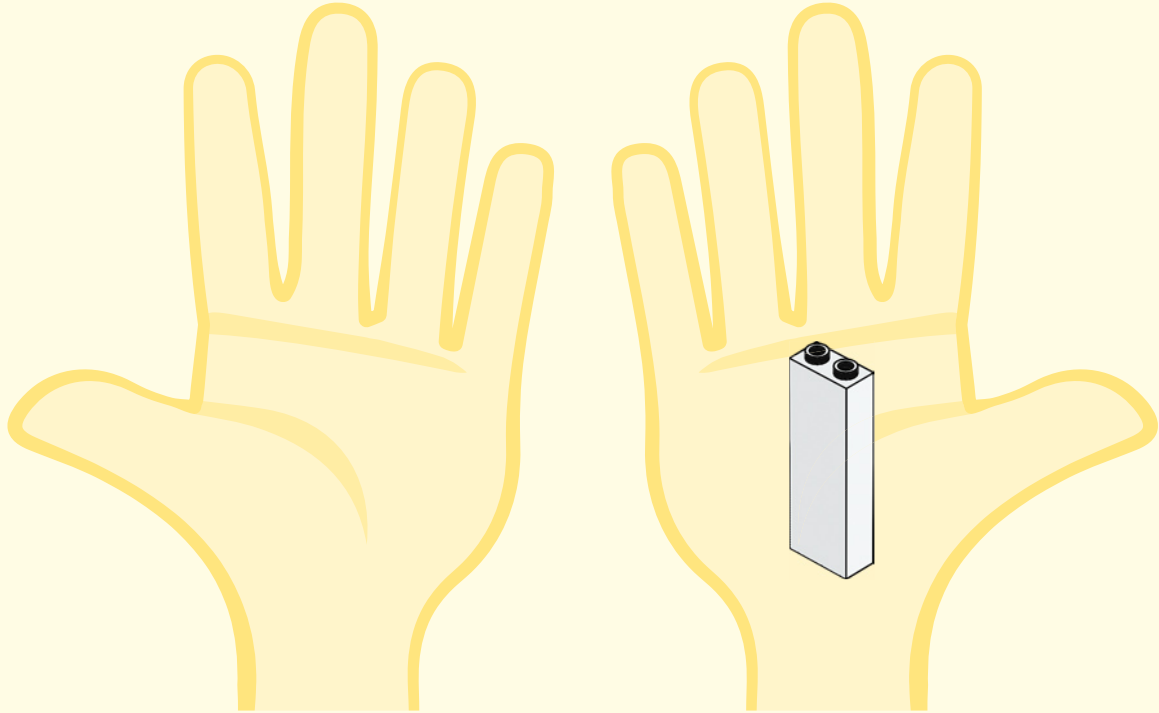 


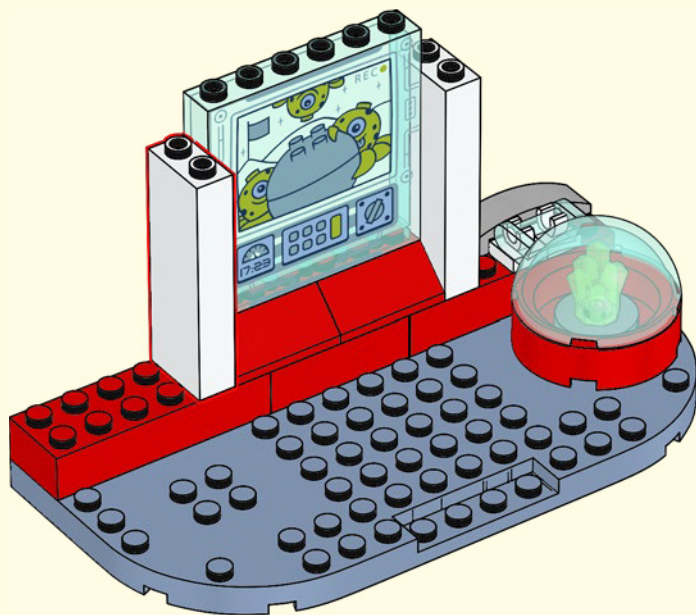 


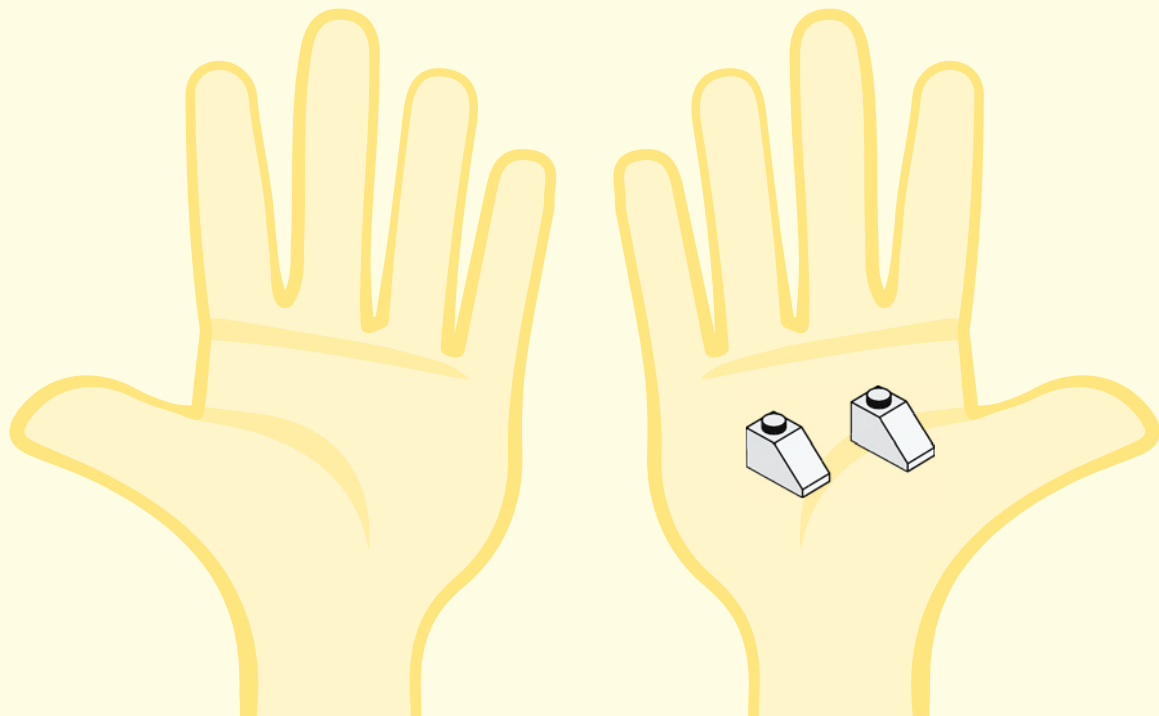 


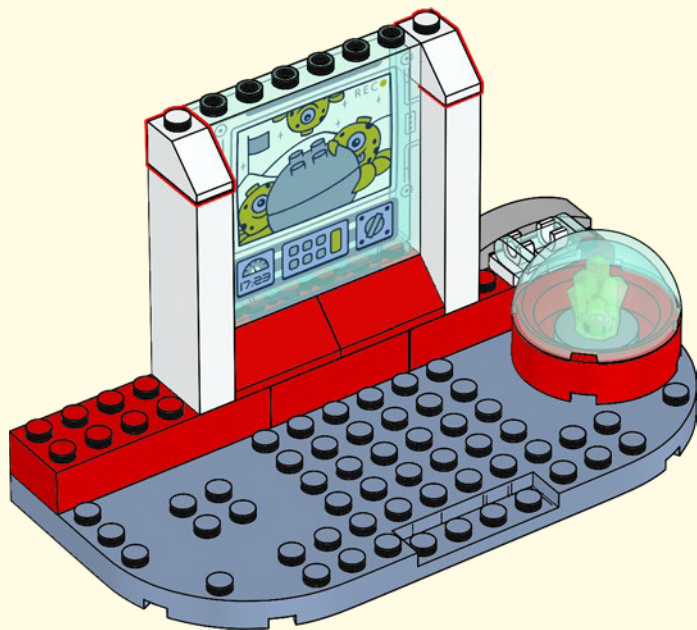 


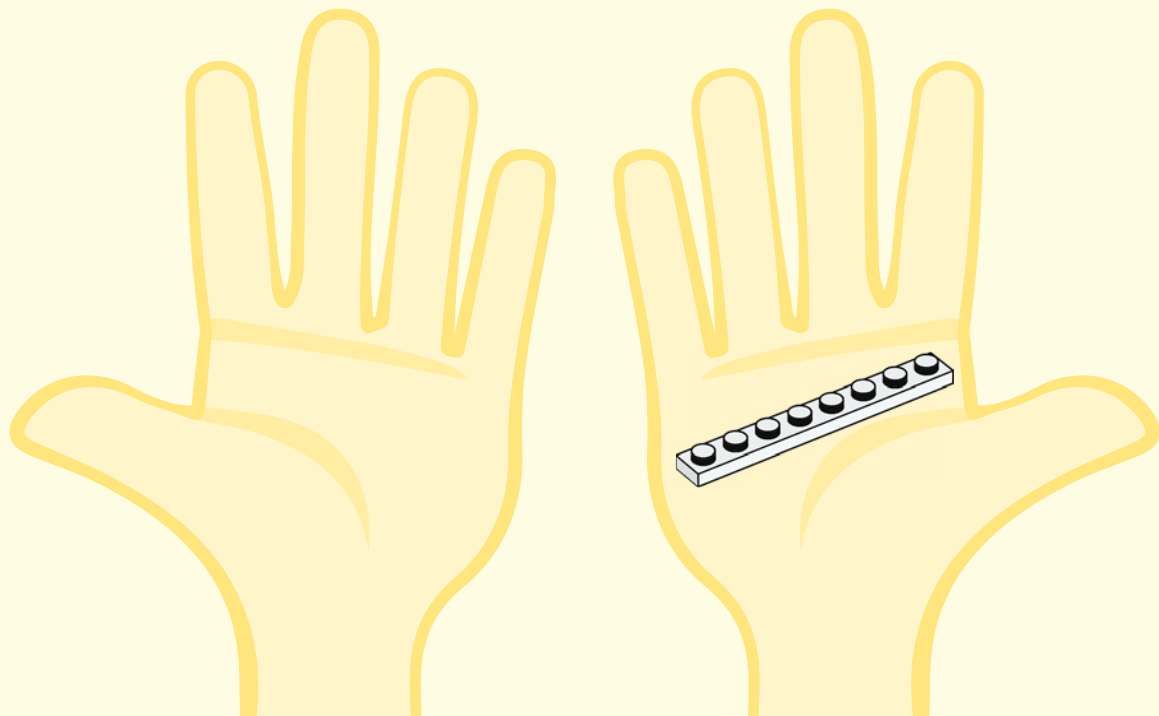 


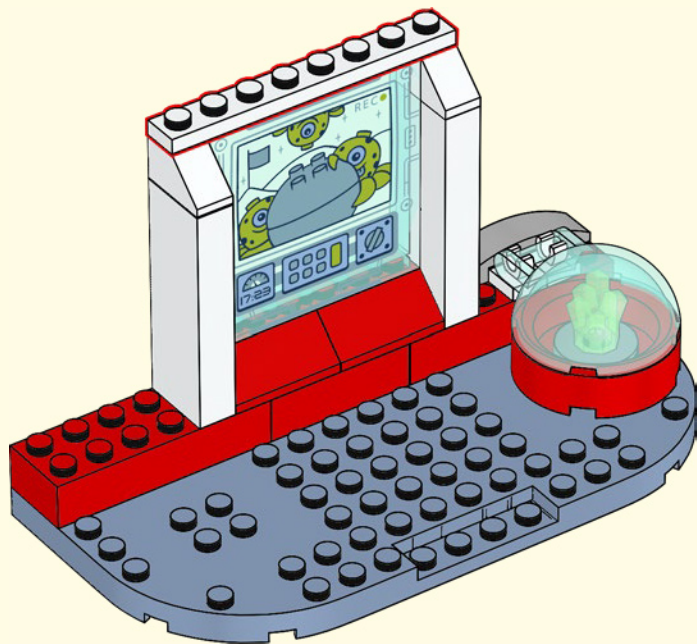 


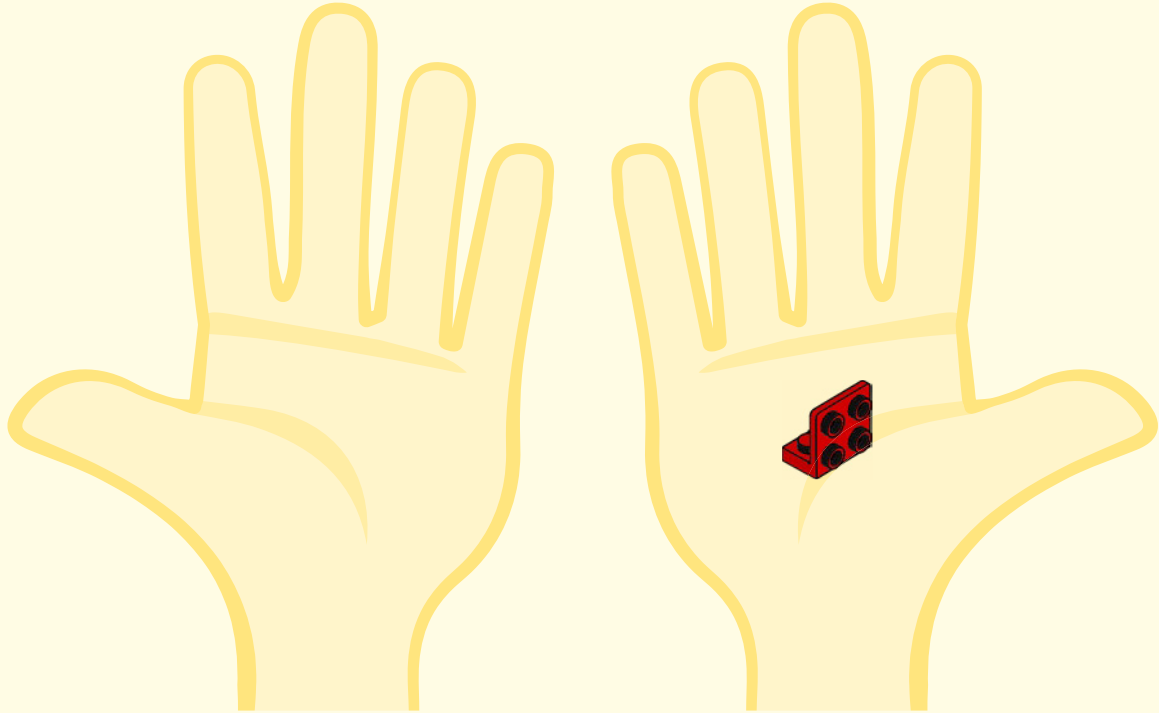 


 
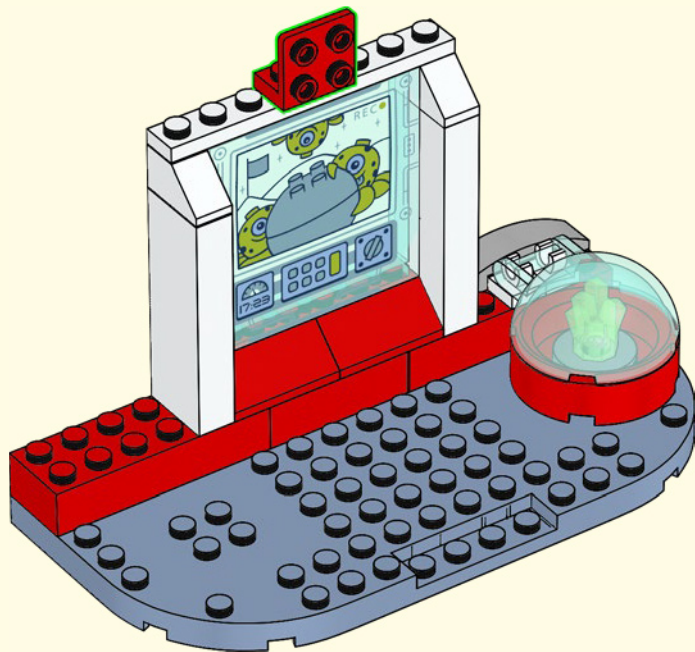 


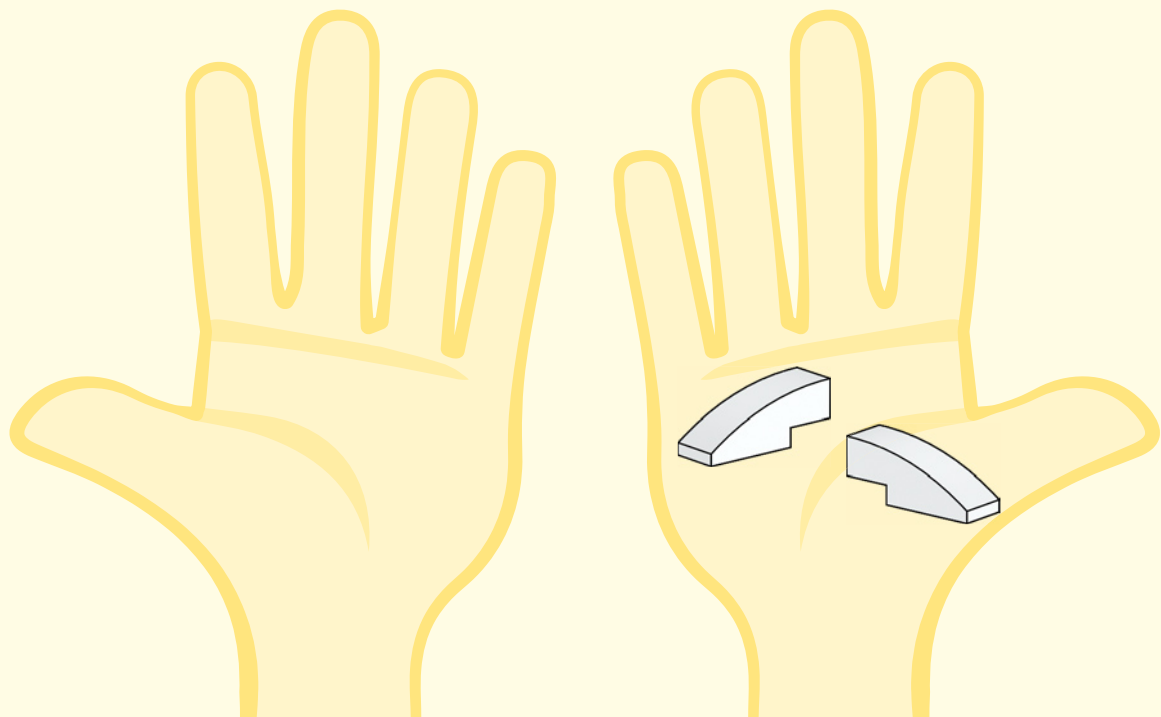 


 
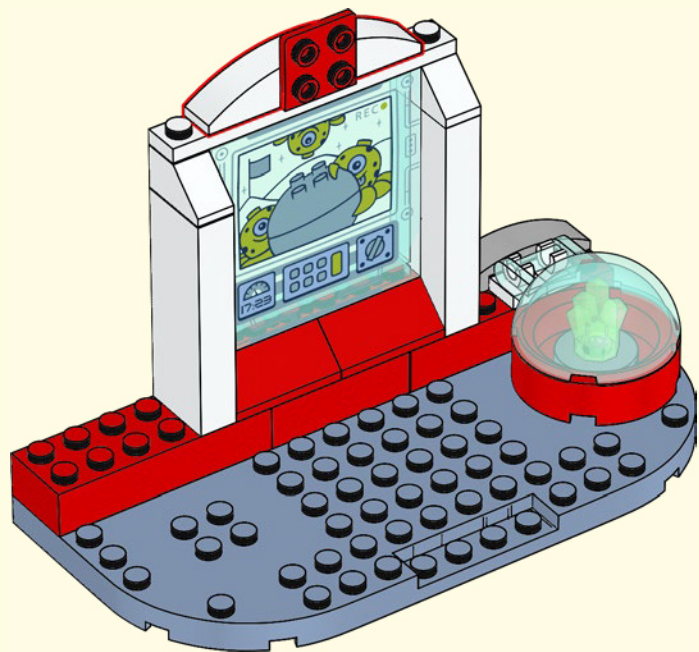 


 
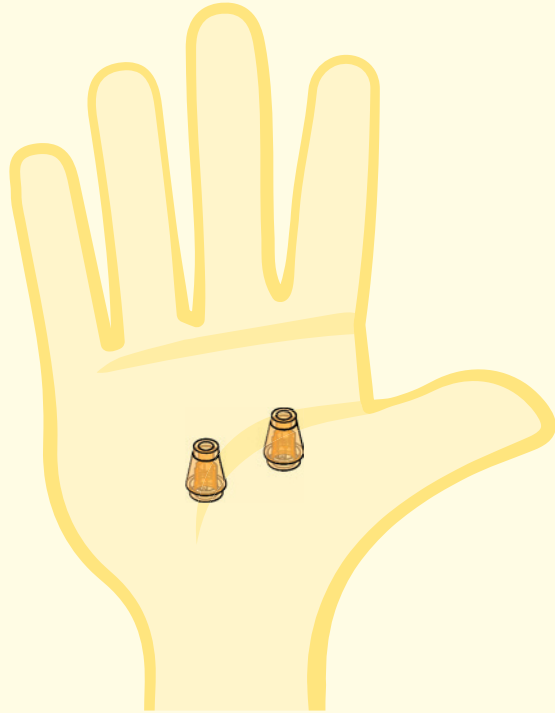 


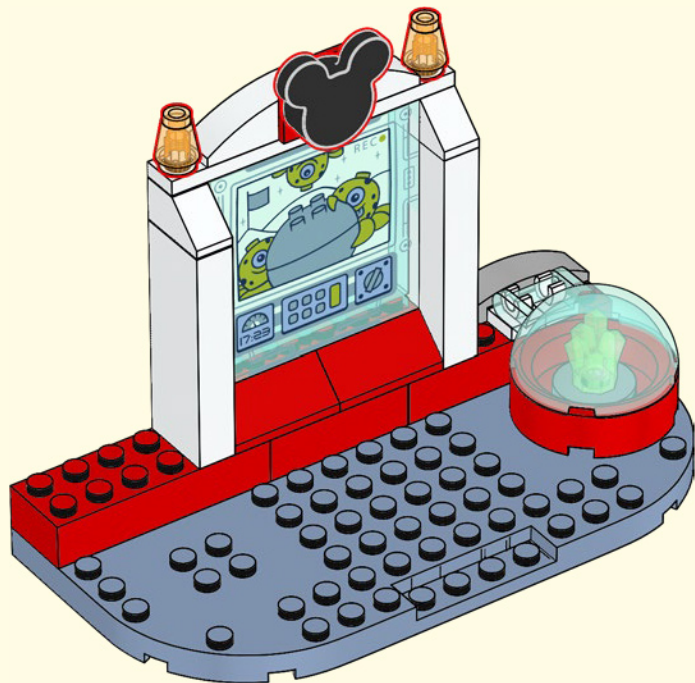 


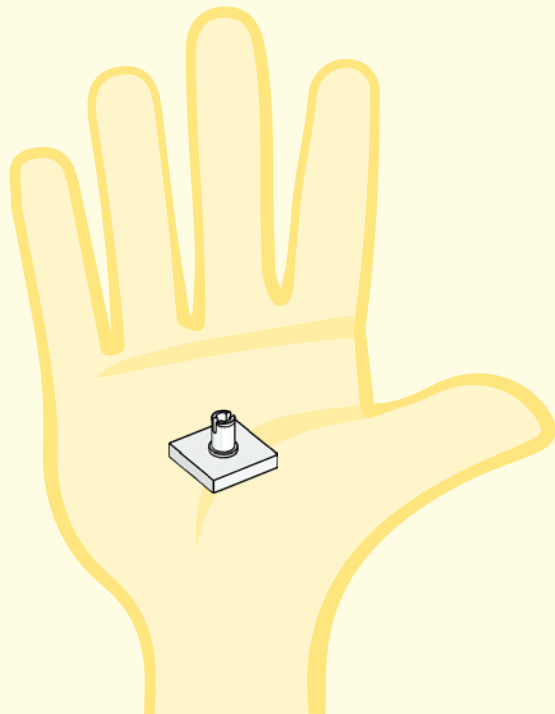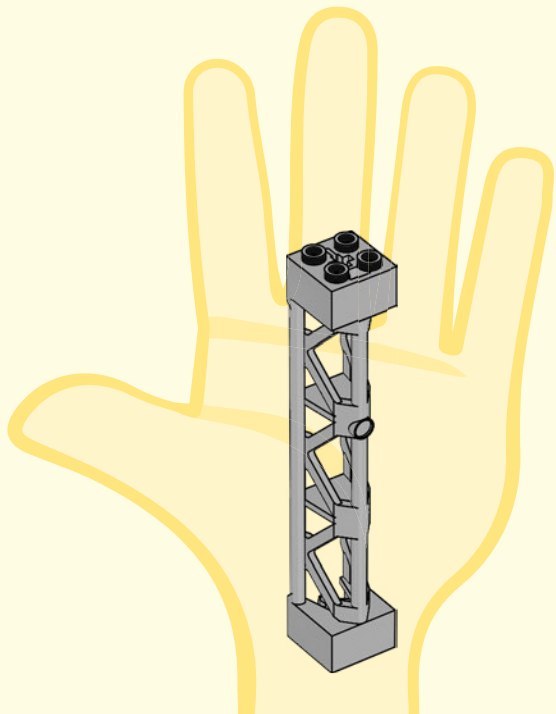 


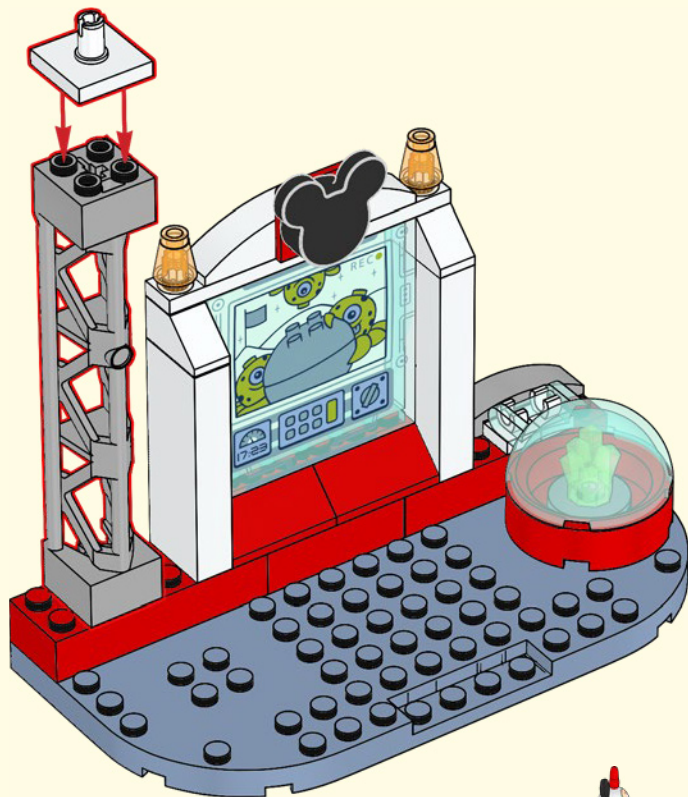 


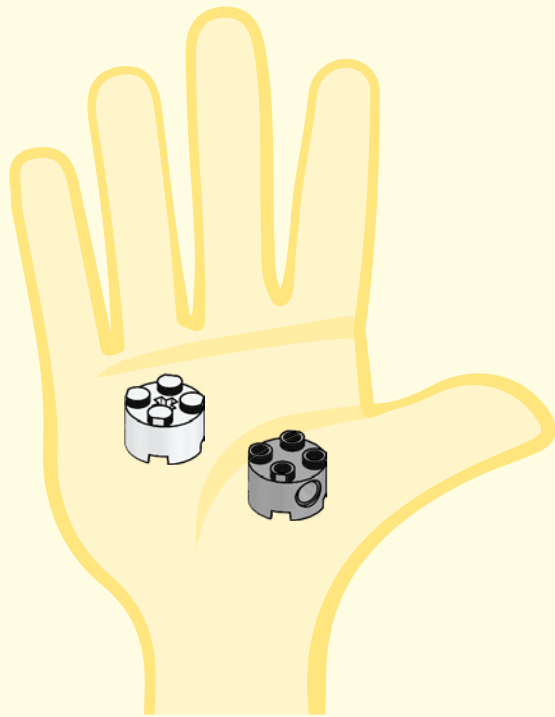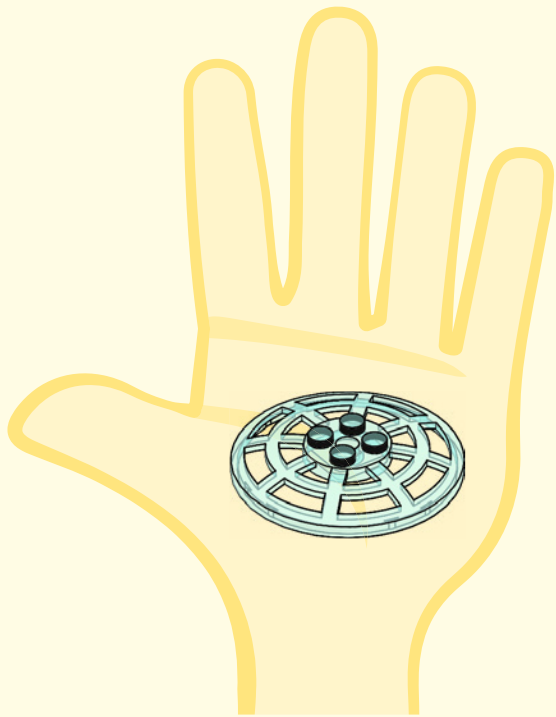 


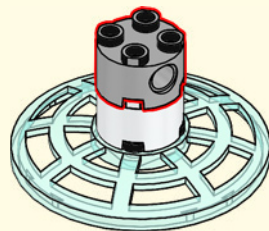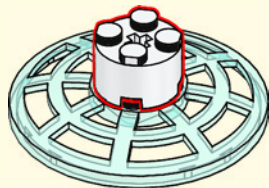 


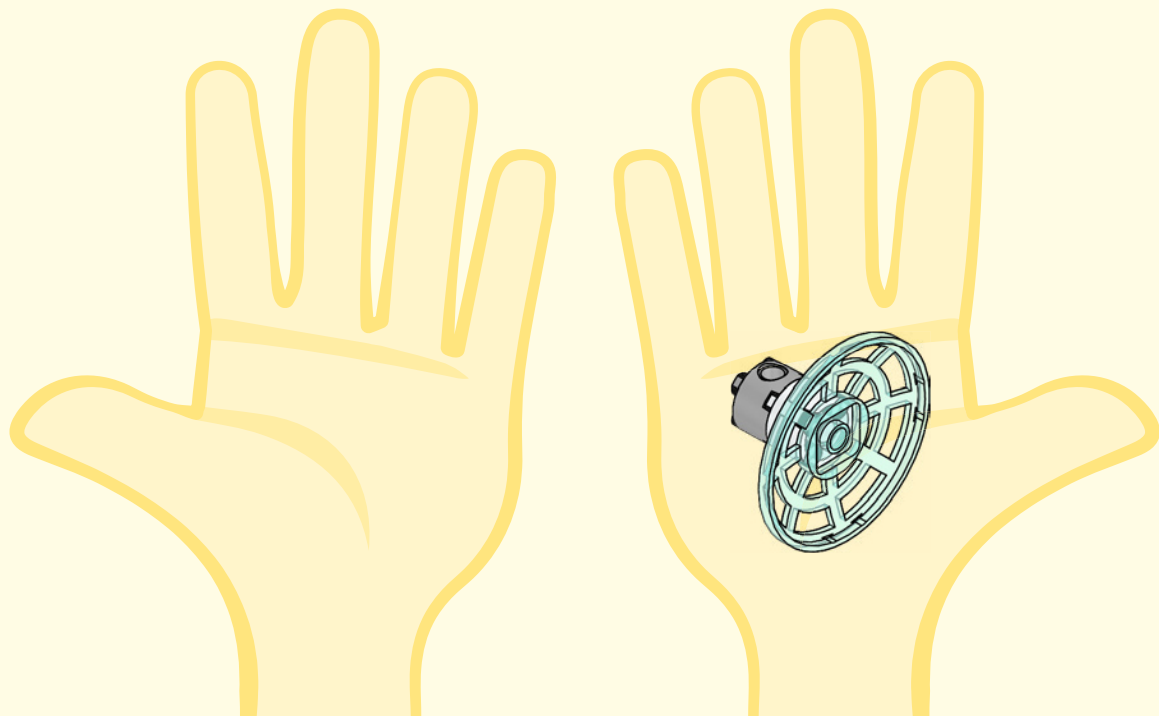

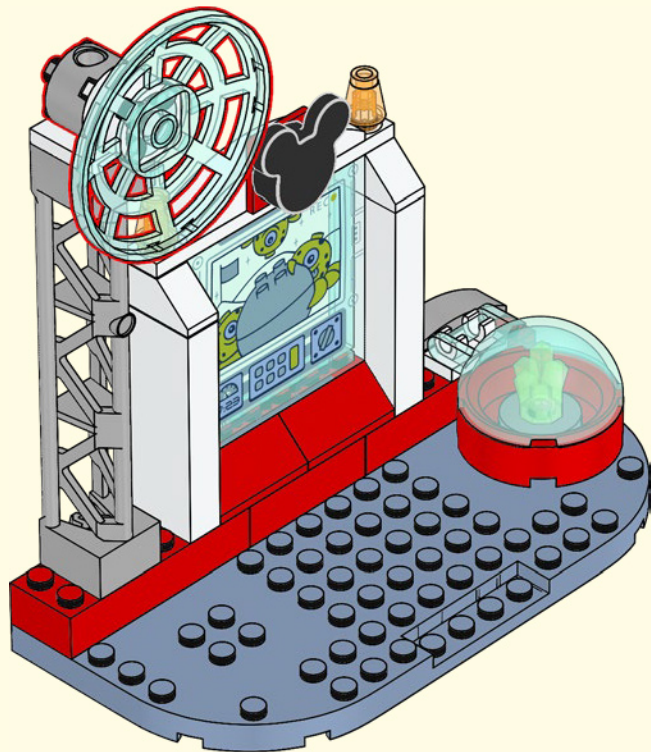

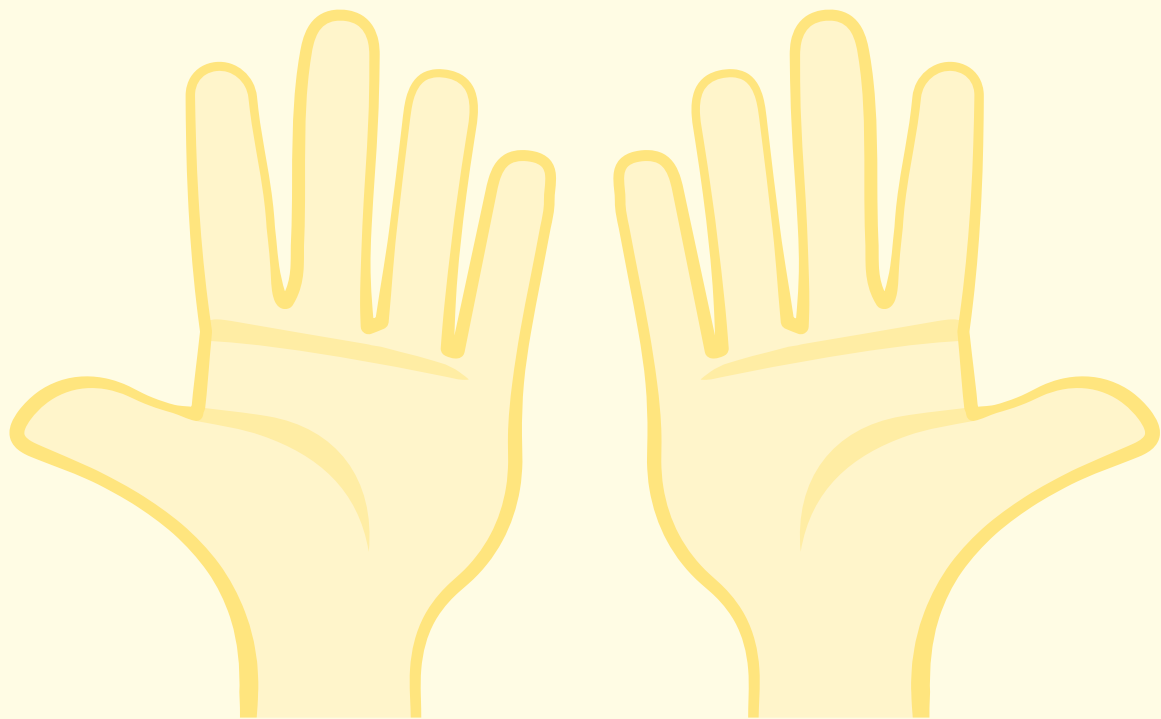

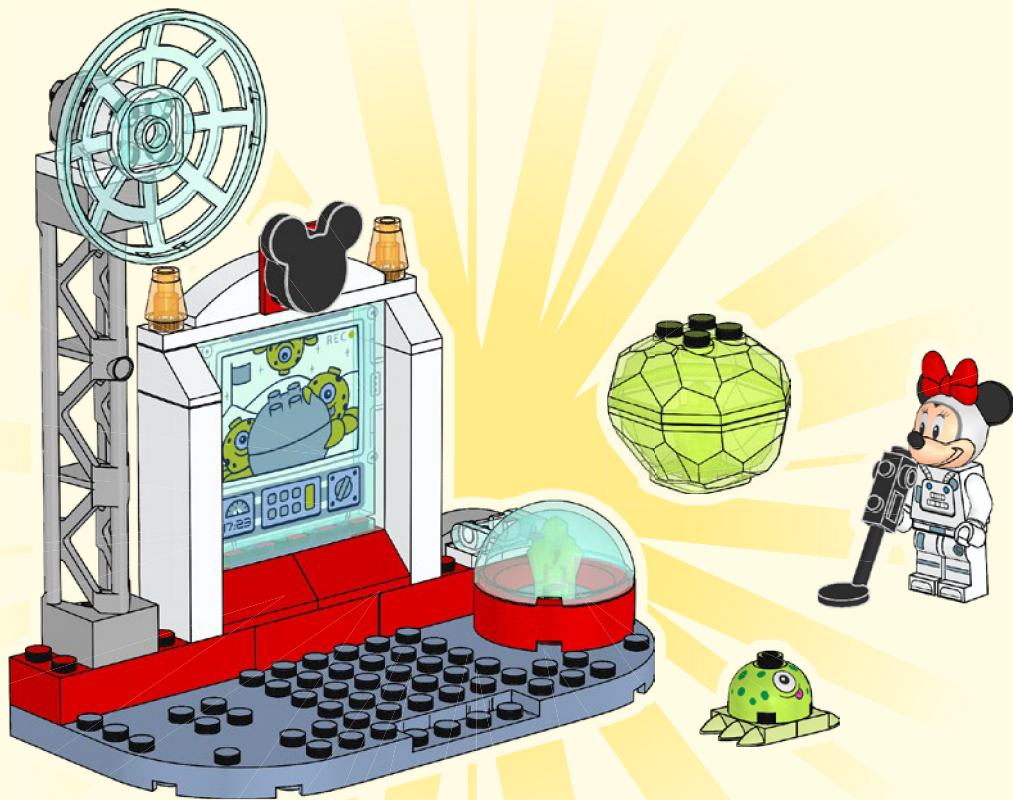

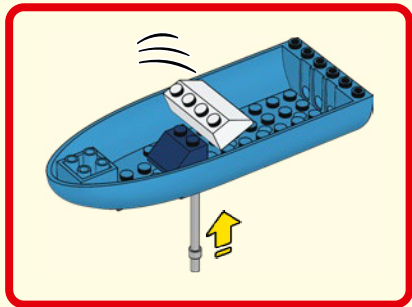


2x
4547489


1x
614301


2x
6342608


2x
6146215

 

2x
6347309


2x
4121932


1x
303901


1x
6313138


1x
303701


1x
346001


2x
245401


2x
6349164


1x
6249091


2x
4249112


2x
4153653


1x
6346808


3x
6252037


1x
6001806


2x
6303213


1x
6313597


3x
302021


1x
300121


3x
6347779


2x
4181138


1x
6011816


1x
389924


1x
6331822


1x
4106552


1x
6336633


1x
6168638


1x
6268646


1x
6264989


4x
4619636


1x
6147214


1x
6144805


1x
6275804


1x
6246896



1x
6346805



1x
6342609



2x
6092592



1x
6299470



1x
6299469



2x
6267421



2x
6246894



2x
6172233



2x
6273154



 
1x
6329152



1x
6078985



1x
6329662



1x
6186292



1x
6342623



2x
6170292



2x
6210581



1x
6170418



1x
4622803



 
1x
6115080




1x
4558959




1x
6342624

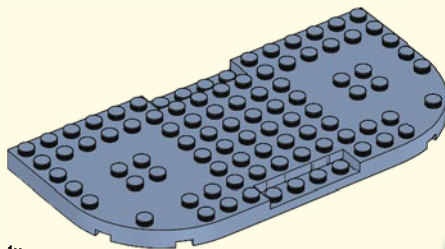

1x
6346468

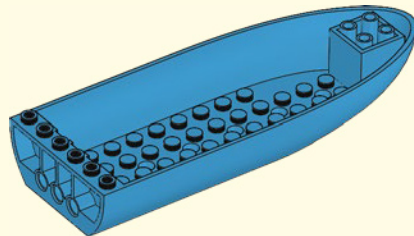 

1x
6336630

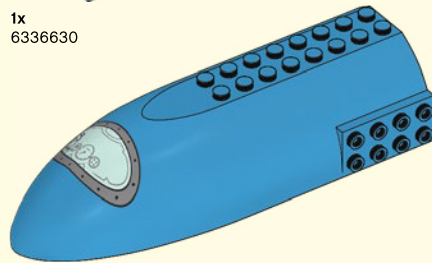 

1x
6342610



Customer Service
Kundenservice
Service Consommateurs
Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346




Disney

©Disney
www.disney.com

LEGO and the LEGO logo are trademarks of the/sont des marques de commerce du/son marcas registradas de LEGO Group.
©2021 The LEGO Group.
6373372



 10776

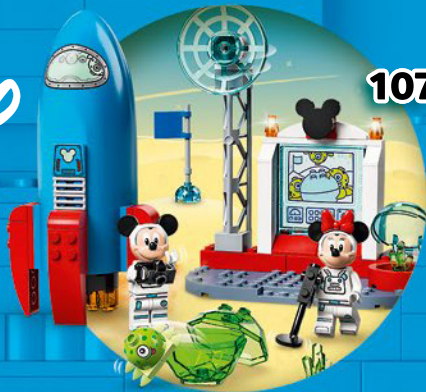

10774



10772



10775



10773

4+

Disney
MICKEY
AND FRIENDS

