



CREATOR

31031



LEGO.com/creator

1



2



3



4



 


1x



1x

1



4x



2x

2

 
1



2



2x

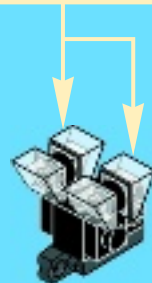



1x



 
 
2x

3

1



2

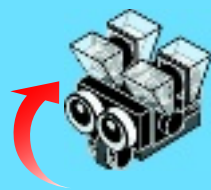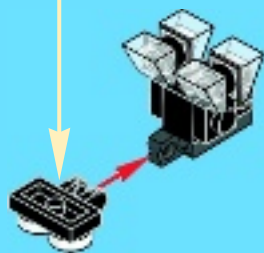



1x

1



1x

2





2x

3



2x

4





1x

5



2x

6





1x

7

 


8



1x

8

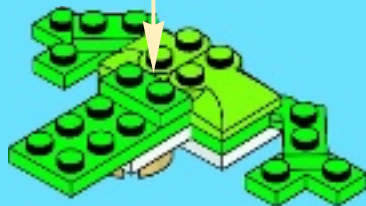



2x

9



1x

10





2x

11



1x

12





1x



2x



1x

13

1



2



 
3






1x

14

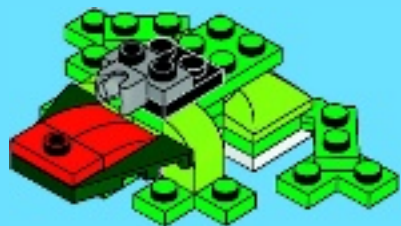

1x

 15

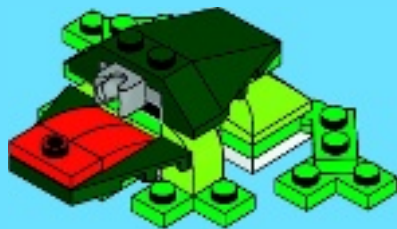



1x



2x



2x



2x



1x



1x

16

1



2



3



4



5







1x

1



1x

2





2x

3

 


2x




2x

4

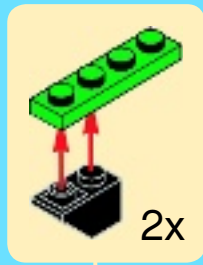


2x

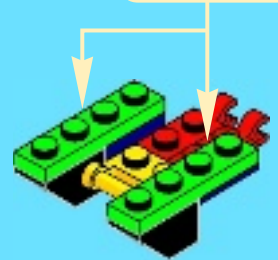 



2x

 5


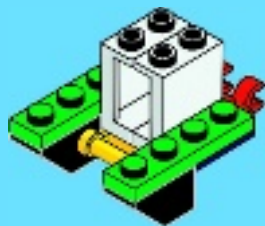


2x



2x

  
6

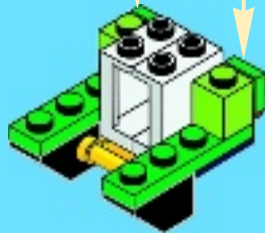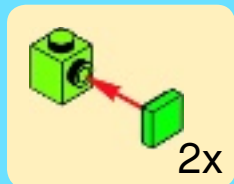



2x

 7


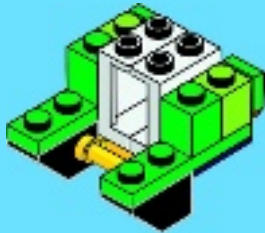


2x



2x

  8

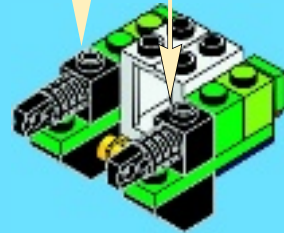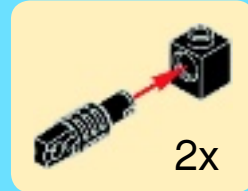



2x

9





1x



1x



1x

10

1



2





1x



2x

11



2x

12





1x



 
1x

13

1



2

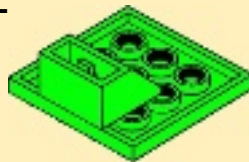




2x



1x

 14

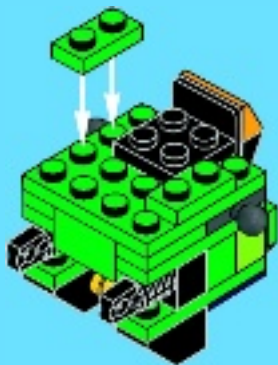



1x

15



2x

 
16





2x

17

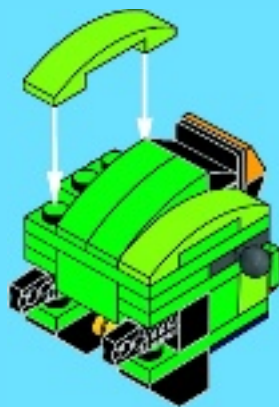



2x



4x

 


2x

18



2x

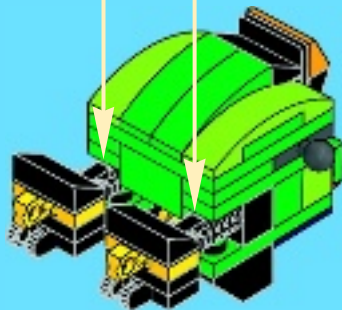



2x



4x

19

 
1



2



2x

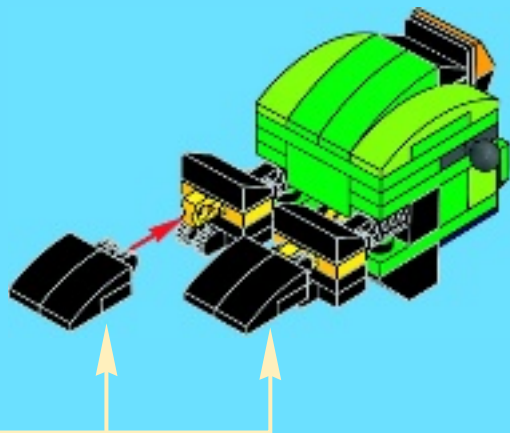



2x

 


2x



2x


20

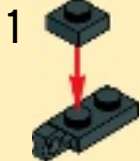

2



 2x

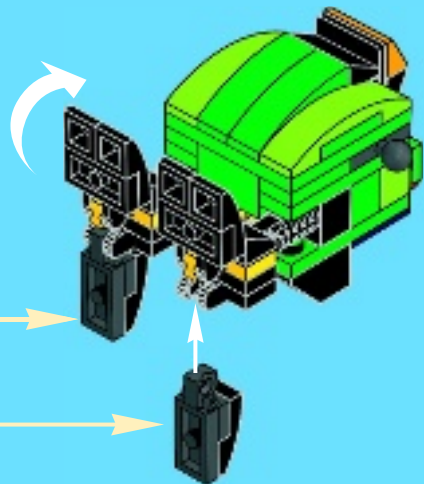




1x



1x

 1

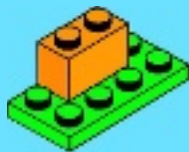

2x

2





1x

3

 


1x



2x

4

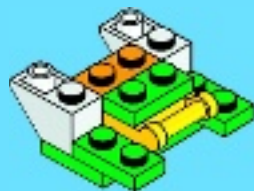




2x



2x

 5

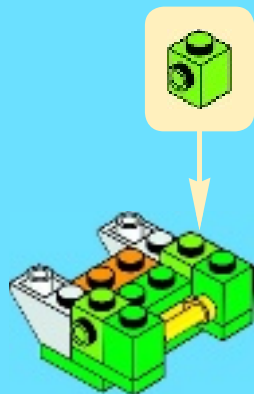


1x



2x

 6

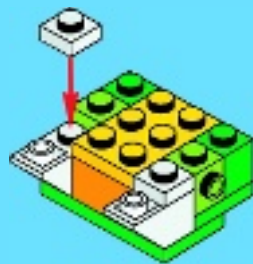



1x



1x

7

 


1x



1x

8

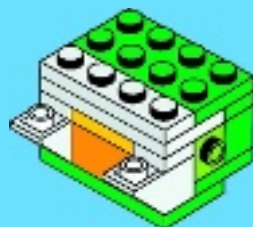



1x

9



2x

10



 


2x



2x

11

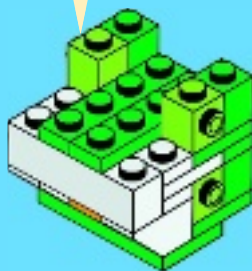


1x



1x

 
12

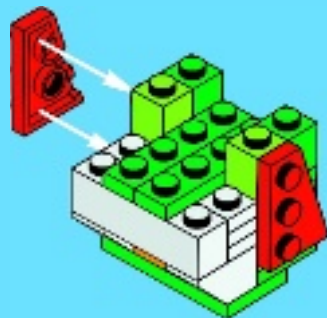



2x

 13


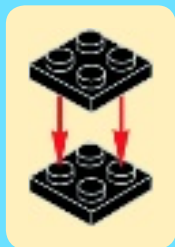


2x



2x

  
14

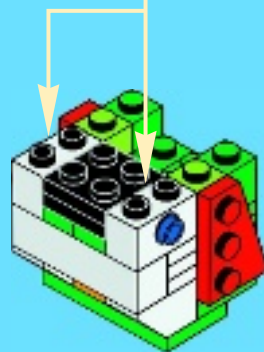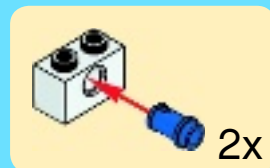




1x

 15

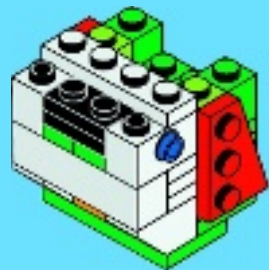

1x

 16

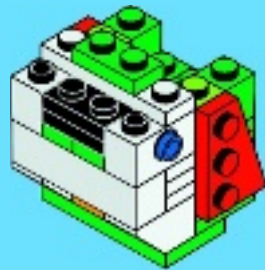



2x

17

 


38



2x


18

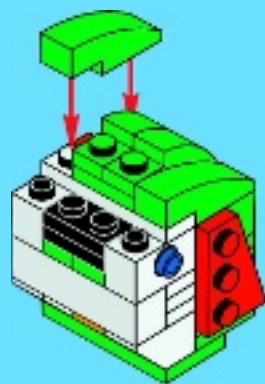




2x

 19

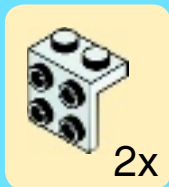

2x

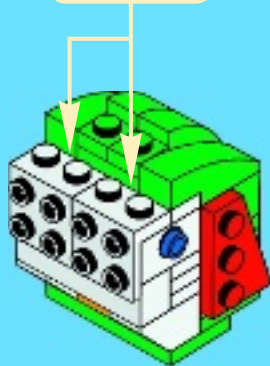 

2x

20





1x



1x



1x



 
1x



1x

21

1

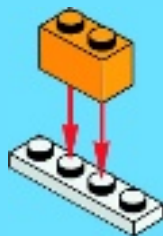


2



3



 4

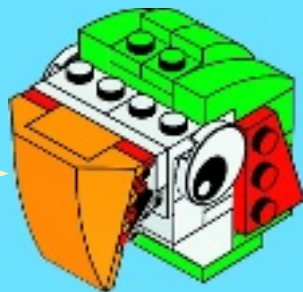




2x

22





1x

 23

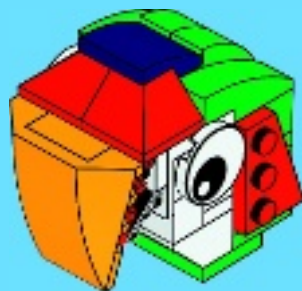

21

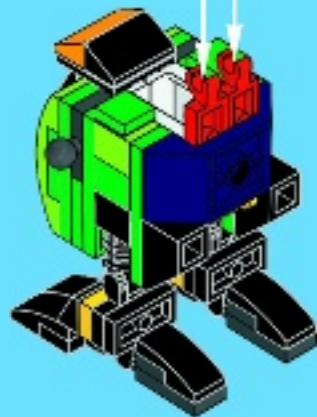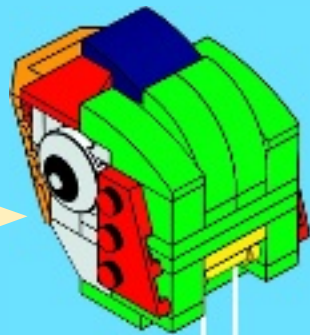  



1x

1



1x

2





1x



1x

3



2x

4





1x

5

 


46



2x

6

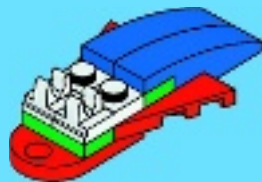




1x

7



 22

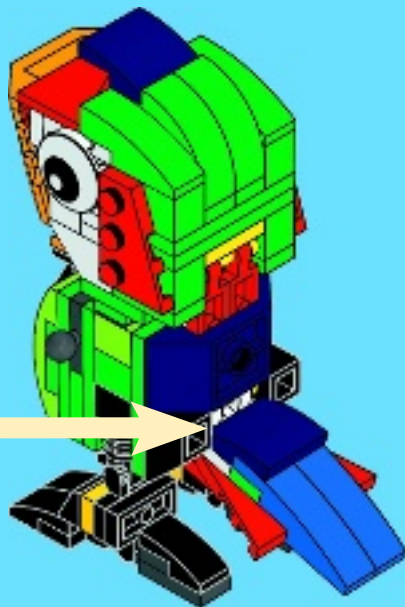



2x



1x



3x



1x



 
2x



1x

23

1



2



3



 
4



5



6

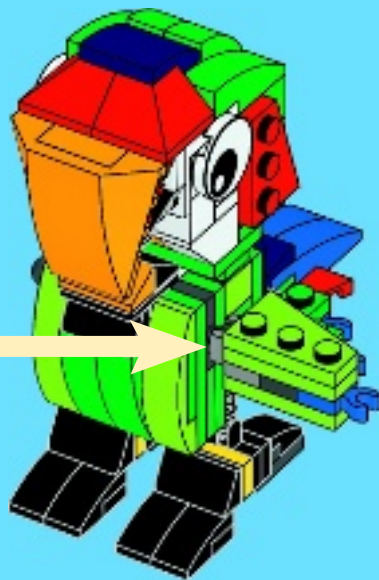



2x



1x



3x



1x



2x



1x

24

1



2



3



4

 


 
5



6



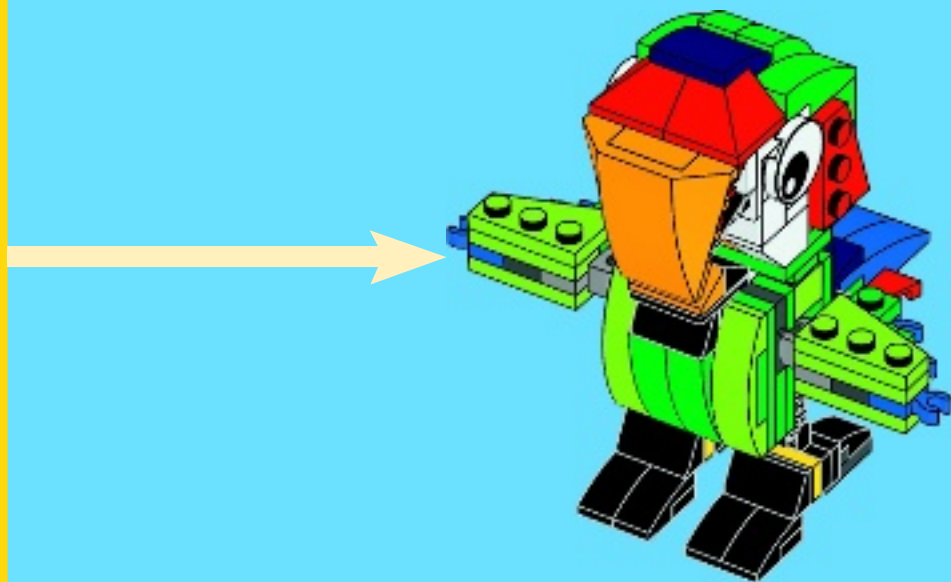

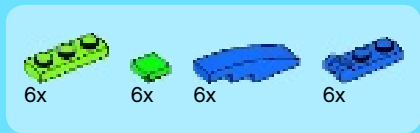


25


1



 
2




3

 

4

 


6x

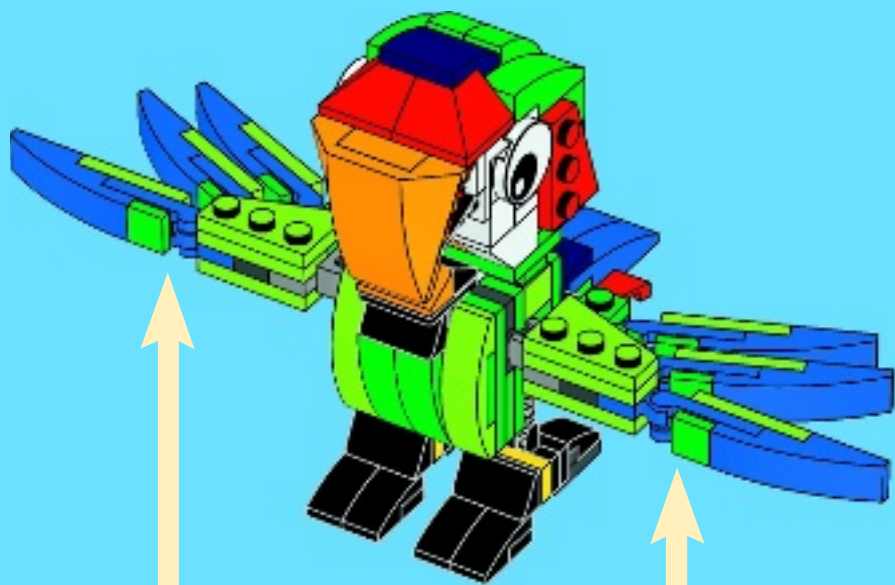 




3x

 26

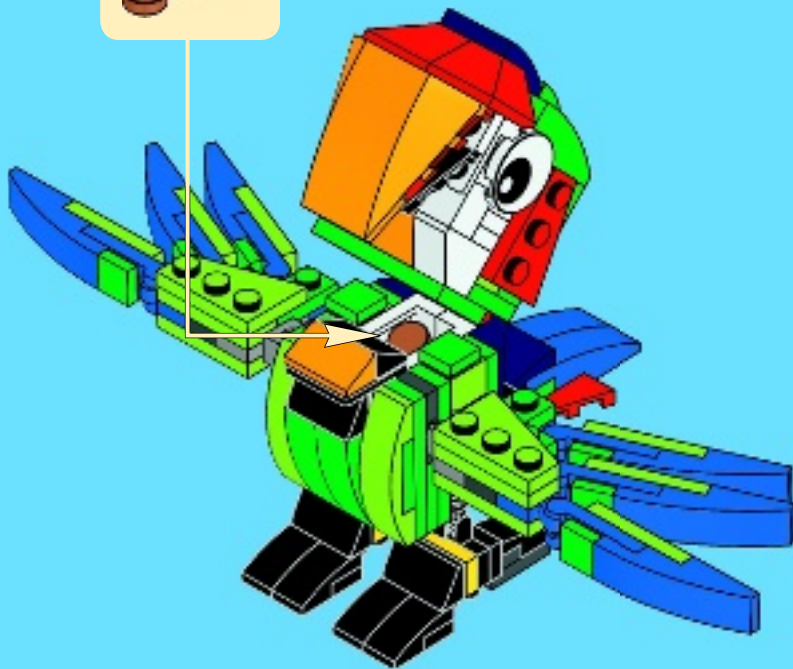

27



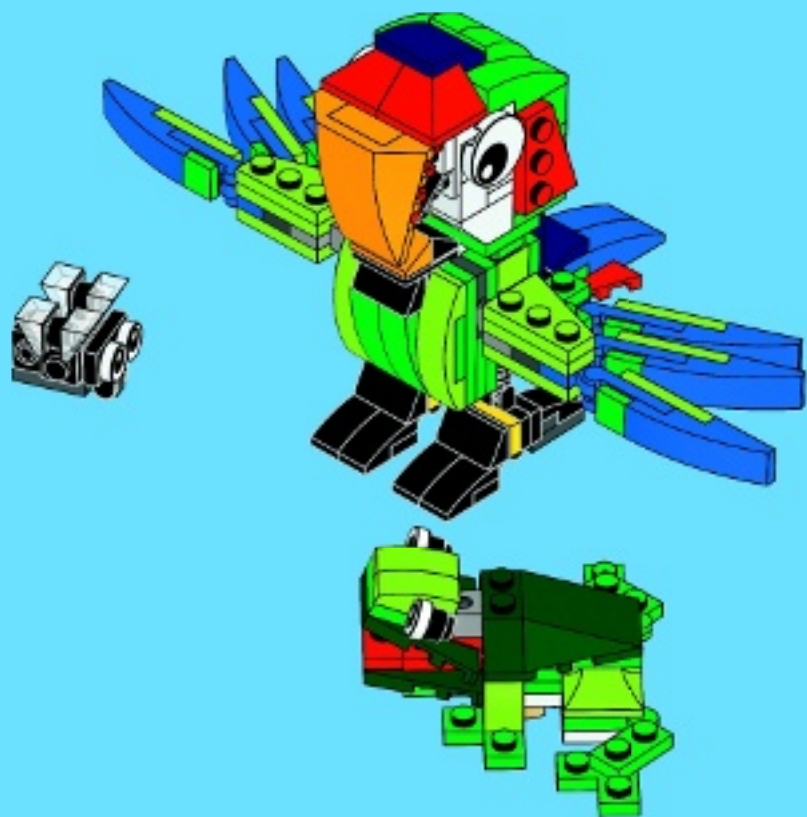 



1x
301001



2x
370001



2x
366501



2x
302401



3x
371001



3x
302001



2x
6060734



2x
4598527



2x
4615649



4x
6029156



2x
4585458



1x
4140562



2x
4163087



2x
6029946



1x
6092565



2x
4534648



1x
4188189



2x
4180504



2x
4180533



1x
4649048



8x
6045938



6x
4613257



6x
6073890



2x
4143005



1x
302124



4x
4185617



2x
4501232



1x
4253815



2x
654126



4x
4548180



2x
366526



6x
6047276



4x
302226



4x
4632571



8x
4515340



1x
6000650



1x
4531412



2x
4159335



6x
300528



1x
4142717



2x
4644085



4x
6039946



8x
4558593



11x
302328



10x
4157120



7x
371028



4x
302028



1x
4243821



2x
6102767



4x
4244362



6x
6073026



2x
6069006



2x
4212446



2x
4617069



10x
4210210



1x
4539907



1x
4539908



2x
6025028



1x
4261784



2x
6061569



4x
4210719



3x
6039479



3x
4210883



1x
6101853



2x
4649051



3x
6055383



3x
6043656



2x
6003003



1x
6024286



1x
6020141

Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346