



# Mixels

41527


**ROKIT**



1



2

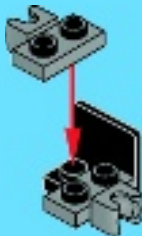

3




4



5



6

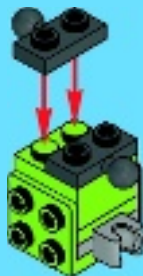


7




8




9

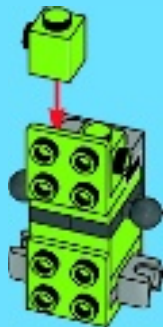

10

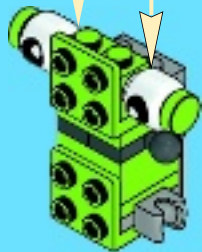

11

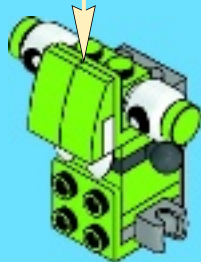

1



2



3



12



13



14




1



2



15

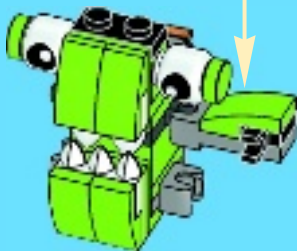



1




2



16



17

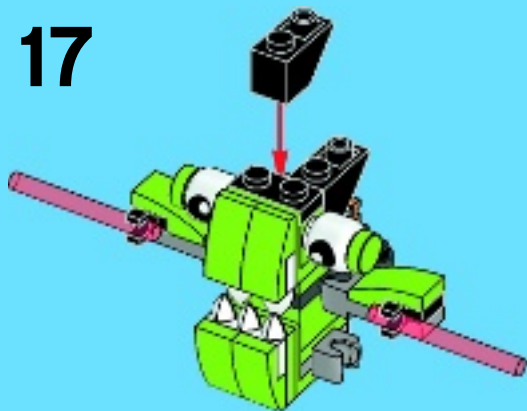



**1**



**2**




**3**



4



18

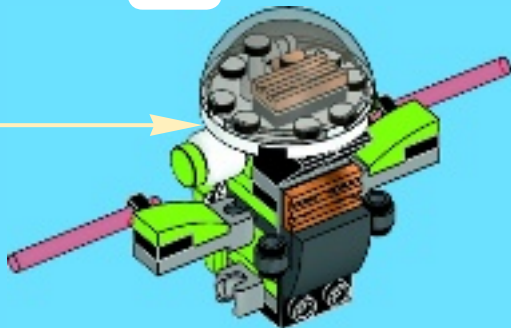

# 19



**1**



**2**




**3**



4



20

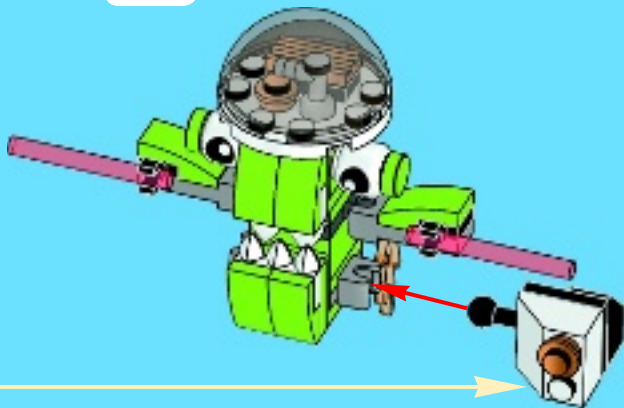

1



2



3






4



21

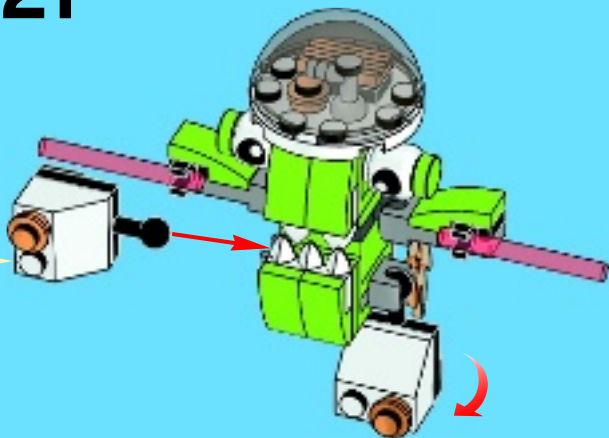



**1**



**2**



**3**



4



5



6



 3x 4523159	 2x 4632574	 1x 4211503	 2x 6073026	 1x 4220632	 1x 4278359	 2x 6060802
 2x 4490599	 2x 6039479	 2x 6043656	 2x 6057878	 2x 4124108	 2x 4273590	 2x 4224792
 1x 6079676	 1x 6071261	 1x 6009014	 6x 6069006	 2x 292126	 2x 4141580	 1x 6060729
 2x 4261397	 2x 6043639	 3x 4537937	 4x 366526	 1x 302226	 1x 6046381	
	 2x 6094031	 2x 4517925	 1x 6000650	 2x 303901		
		 3x 302326	 2x 6051038	 1x 4515347		

 Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

[LEGO.com/service](http://LEGO.com/service) or dial



00800 5346 5555 :     

1-800-422-5346 :  



**ROKIT  
41527**



**NIKSPUT  
41528**



**NURP-NAUT  
41529**



**ORBITONS  
MAX!**



[LEGO.com/mixels](http://LEGO.com/mixels)





# Mixels



[LEGO.com/mixels](http://LEGO.com/mixels)





Mixels

CN  
CARTOON NETWORK