



CITY

60088



1



2



3



4



 
2



1



2

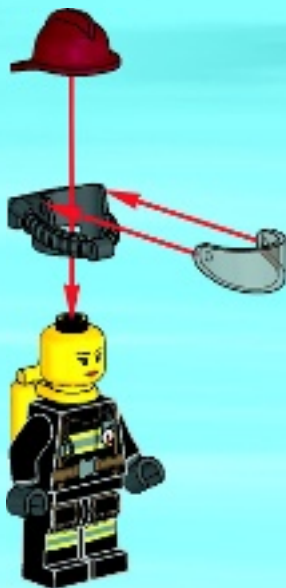


3






 
1

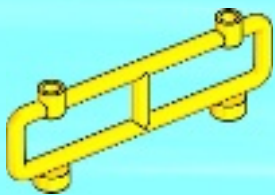

2

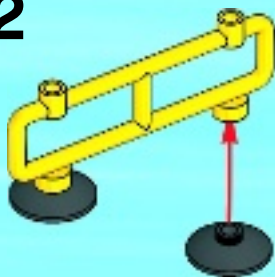 

3

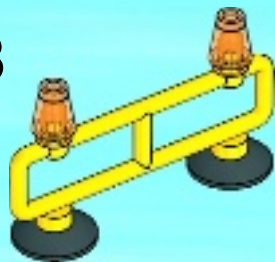 



1x

 
1





2x

2

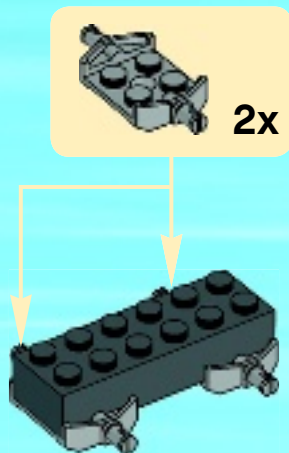

1x

3





1x



2x

4





 
1x

5



1x

6

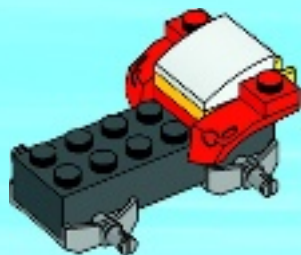



1x

7





1x

8



1x

9





1x



1x

10



 


1x



1x

11

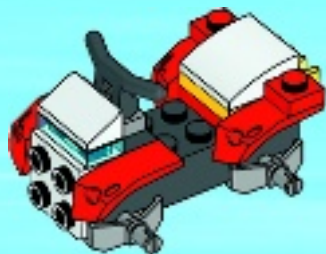


1x



1x

 12

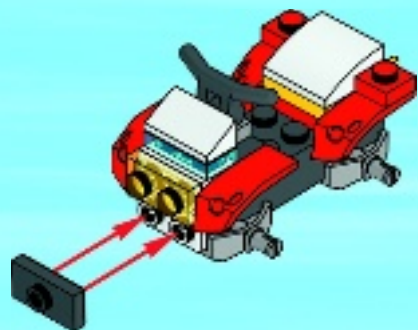



1x

13





1x

14



1x



1x



1x

15





1x



1x

16



 


 
4x



4x


17

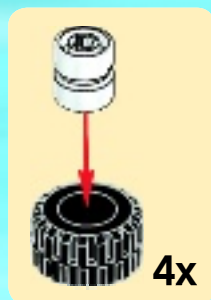

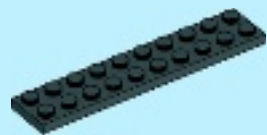

1x

 1

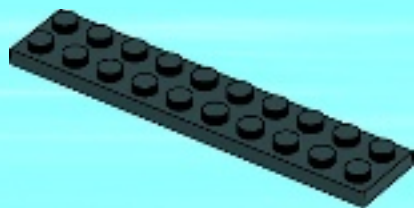




1x




1x

 2

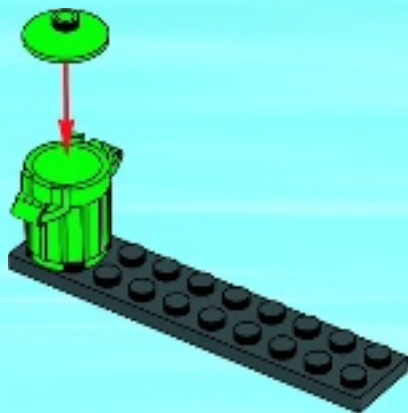

1x

 3

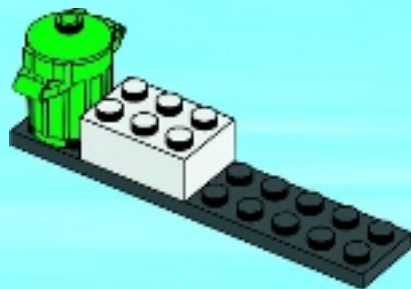



1x



 
1x

4

1




2

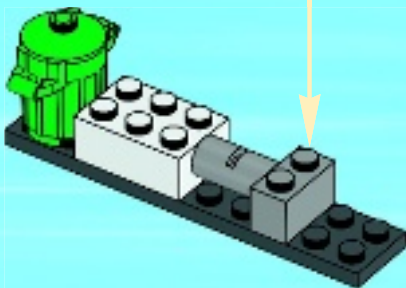



1x

 5

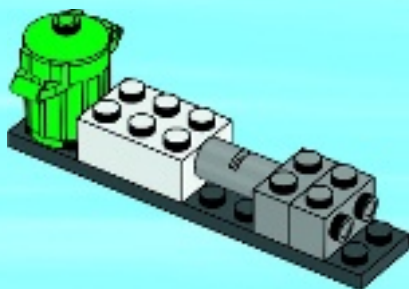




1x



1x

 
6

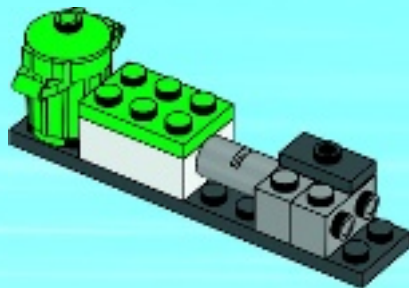



2x

 7

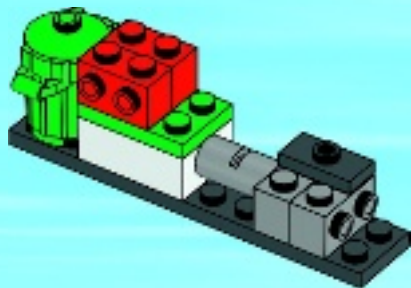


1x



1x

 
8

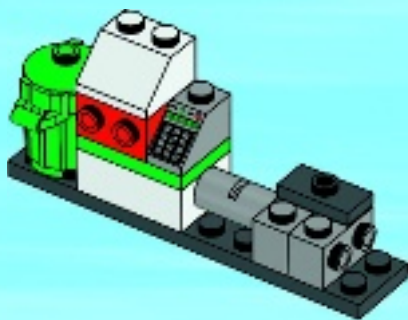





1x

  9

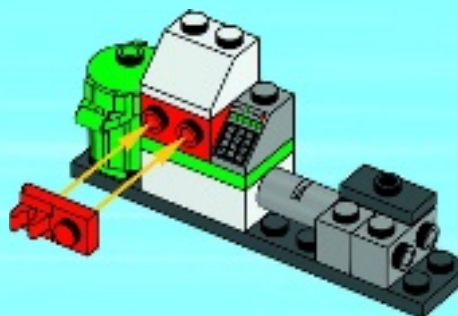

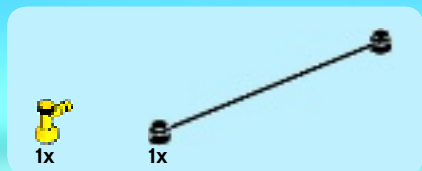

10

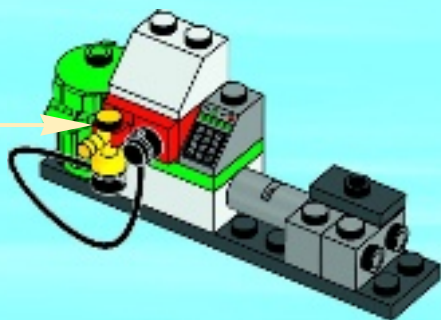 




11

1



 
2

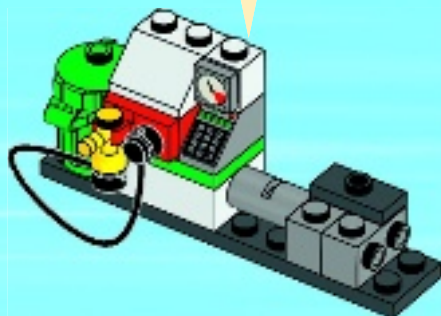



1x

 12

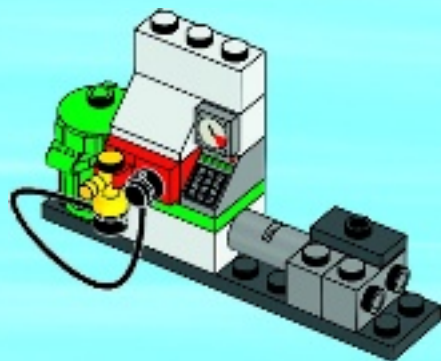




1x



1x

 13

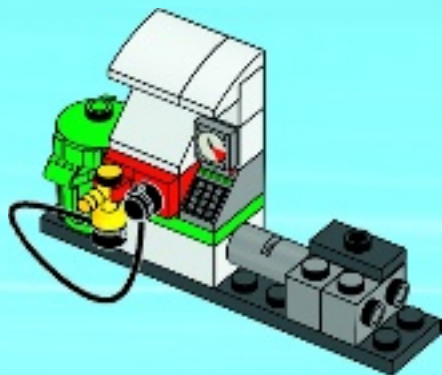


1x



1x

 14

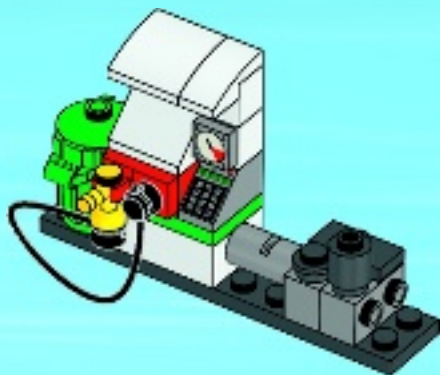




2x



2x

 15

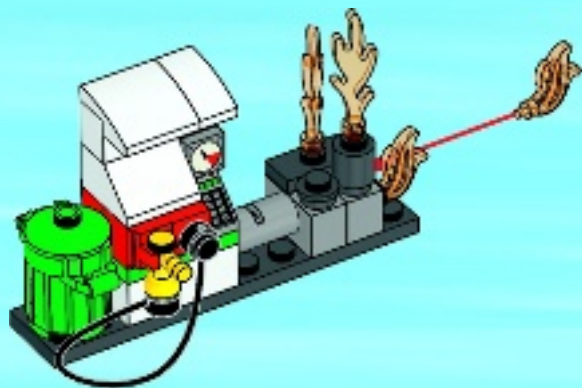



 1x 362201	 4x 4170457	 1x 302324	 1x 408326	 1x 302128	 2x 4567338	 1x 4526985	 1x 4210633
 1x 300201	 2x 6019155	 2x 4613258	 1x 9339	 1x 4567908	 2x 4649066	 1x 4210875	 2x 4211010
 1x 4558952	 1x 371021	 3x 4256320	 2x 6018684	 1x 4626650	 2x 4261397	 1x 4211090	 2x 4261469
 1x 4547489	 1x 4597713	 1x 4189225	 2x 6018492	 1x 3006843	 1x 6015344	 1x 4211090	 2x 4261908
 1x 4547489	 1x 434921	 1x 6100203	 1x 6100054	 1x 4260426	 1x 4211364	 3x 6092572	 1x 6051842
 1x 303901	 2x 4653024	 1x 4654328	 1x 400626	 1x 4194746	 1x 4228198	 1x 4210678	
 1x 6034044	 1x 6100249	 1x 6100249	 1x 6100054	 1x 4260426	 1x 4255629	 1x 6096955	
 2x 6047220	 1x 9341	 1x 6100249	 1x 400626	 1x 4194746	 2x 6071229		
 1x 6117940	 1x 6032176	 1x 4613418	 1x 383526	 1x 4288003	 1x 4255629		
 1x 6021860	 2x 306224	 2x 4613418	 4x 4568644	 2x 4163306	 2x 6071229		

Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346